



Installation, use and maintenance manual

Link

Modular heating unit and heater/chiller

powered by gas and renewable energy

H2NG
HYDROGEN
READY 20%



DISPOSAL

The appliance and all its accessories must be disposed of separately in accordance with the regulations in force.



Use of the WEEE symbol (Waste Electrical and Electronic Equipment) indicates that this product cannot be disposed of as household waste. Proper disposal of this product helps to prevent potential negative consequences for the environment and human health.

Revision: A

Code: D-LBR919EN

This Installation, use and maintenance manual has been drawn up and printed by Robur S.p.A.; whole or partial reproduction of this Installation, use and maintenance manual is prohibited.

The original is filed at Robur S.p.A.

Any use of this Installation, use and maintenance manual other than for personal consultation must be previously authorised by Robur S.p.A.

The rights of those who have legitimately filed the registered trademarks contained within this publication are not affected.

With the aim of continuously improving the quality of its products, Robur S.p.A. reserves the right to modify the data and contents of this Installation, use and maintenance manual without prior notice.

TABLE OF CONTENTS

I	Introduction	4	3.2	Hydraulic system	25
I.1	Recipients	4	3.3	Fuel gas supply	30
I.2	Control device	4	3.4	Flue gas exhaust	31
I.3	Available languages	4	3.5	Flue gas condensate drain	31
II	Symbols and definitions	4	3.6	Defrosting water drainage	32
II.1	Key to symbols	4	3.7	Safety valve drain	32
II.2	Terms and definitions	4	4	Electrical installer	32
III	Warnings	4	4.1	Warnings	32
III.1	General and safety warnings	4	4.2	Electrical systems	33
III.2	Compliance	6	4.3	Electrical power supply	33
III.3	Exclusions of liability and warranty	6	4.4	Adjustment and control	34
1	Features and technical data	7	4.5	Water circulation pumps	38
1.1	Features	7	5	First start-up	40
1.2	Circulating pumps	7	5.1	Preliminary checks	40
1.3	Description of the Link	7	5.2	Electronic adjustment on the appliance – Menus and parameters	41
1.4	Hydraulic/gas connections	10	5.3	Modifying settings	41
1.5	Dimensions	14	6	Normal operation	41
1.6	Equipment of a Link with water pumps	20	6.1	Warnings	41
1.7	Equipment of a Link without water pumps	21	6.2	Switch on and off	41
1.8	Electrical specifications	21	6.3	Modifying settings	42
1.9	Electronic boards	22	6.4	Efficiency	42
1.10	Operation mode	22	7	Maintenance	42
1.11	Controls	22	7.1	Warnings	42
1.12	Technical data	23	7.2	Pre-emptive maintenance	42
2	Transport and positioning	23	7.3	Scheduled routine maintenance	43
2.1	Warnings	23	7.4	Messages on the display	43
2.2	Handling and lifting	23	7.5	Restarting a locked-out appliance	43
2.3	Appliance positioning	24	7.6	Periods of inactivity	44
2.4	Minimum clearance distances	24	8	Diagnostics	44
2.5	Mounting base	24	8.1	Appliances/Control panels	44
3	Heating engineer	25			
3.1	Warnings	25			

I INTRODUCTION



Installation, use and maintenance manual

This Manual is an integral part of the Link appliance and must be handed to the end user together with the appliance.

I.1 RECIPIENTS

This Manual is intended for:

- End user, for appropriate and safe use of the appliance.
- Qualified installer, for correct appliance installation.
- Planner, for specific information on the appliance.

I.2 CONTROL DEVICE

In order to work, the Link appliance requires a control device to be connected by the installer.

I.3 AVAILABLE LANGUAGES

This document is originally written in Italian and English. Any other languages are translations of this document.

For versions of this document in other languages, see Robur website.

II SYMBOLS AND DEFINITIONS

II.1 KEY TO SYMBOLS



DANGER



WARNING



NOTE



PROCEDURE



REFERENCE (to other document)

II.2 TERMS AND DEFINITIONS

DHW = Domestic Hot Water.

Aerothermal appliances = gas-fired heating/cooling appliances intended exclusively for outdoor installation (gas absorption heat pumps GAHP A Plus/GAHP AR Plus, or gas absorption chillers GA ACF/HR/TK/HT/LB), which require proper heat exchange with outdoor air to operate.

Appliance/Module GAHP/GA/AY = equivalent terms used to designate the individual gas-fired heating/cooling appliance (GAHP A Plus/GAHP AR Plus/GAHP GS/WS Plus gas absorption heat pump, or GA ACF/HR/TK/HT/LB gas absorption chiller or AY condensing boiler), forming part of the Link together with other modules/appliances.

Appliance/Preassembled group/Link = equivalent terms used to designate the generic heating/cooling hydronic group consisting of GAHP/GA/AY modules.

TAC = Robur authorized Technical Assistance Centre.

CCI control panel (Comfort Controller Interface) = optional Robur control device which lets you manage up to three modulating GAHP appliances (GAHP A, GAHP GS/WS) of the same type, for heating only.

DDC control panel (Direct Digital Controller) = optional Robur control device to manage one or more Robur appliances in in modulating mode (GAHP heat pumps, AY boilers) or ON/OFF mode (GA chillers).

RB100/RB200 devices (Robur Box) = optional interface devices complementary to the DDC control panel, which may be used to broaden its functions (heating/cooling/DHW production service requests and control of system components such as third party generators, diverter valves, water pumps, probes).

Link condensing boilers = preassembled group consisting of a combination of AY condensing boilers.

Link heat pumps = preassembled group for heating and/or cooling, consisting of a combination of GAHP/GA/AY heating/cooling modules, in which at least one GAHP heat pump is present.

Link chillers = preassembled group of chillers, consisting of a combination of GA refrigeration modules (excluding ACF60-00 HR modules).

Link chiller-heaters = preassembled group for heating and cooling consisting of a combination of GA/AY heating/cooling modules, including ACF60-00 HR modules.

First start-up = appliance commissioning operation which may only and exclusively be carried out by a TAC.

III WARNINGS

III.1 GENERAL AND SAFETY WARNINGS



GAHP/GA/AY modules

As far as the individual GAHP/GA/AY modules making up the Link are concerned, please read the warnings in their respective manuals, with particular regard to the following aspects (where applicable):

- Poisoning

- Moving parts
- Burn hazard
- Pressure vessels
- Water-ammonia solution
- Limescale and corrosion
- Chloride concentration
- Aggressive substances in the air



Installer's qualifications

Installation must exclusively be performed by a qualified firm and by qualified personnel, with specific knowledge on heating, cooling, electrical systems and gas appliances, in compliance with the laws in force in the Country of installation.



Declaration of conformity

Upon completing installation, the installing firm shall issue to the owner/client the appliance's workmanlike conformity declaration, according to national/local regulations in force and the manufacturer's instructions/provisions.



Misuse

The appliance must only be used for the purposes for which it has been designed. Any other use is deemed hazardous. Incorrect use may affect operation, duration and safety of the appliance. Adhere to the manufacturer's instructions.



Use of the appliance by children

The appliance can be used by children over 8 years old and by people with reduced physical, sensory or mental capabilities or lack of experience or knowledge only if they are under surveillance or after they have received instructions regarding safe use of the appliance and understand the dangers inherent in it. Children should not play with the appliance.



Hazardous situations

- Do not start the appliance in hazardous conditions, such as: gas smell, problems with the plumbing/electrical/gas system, parts of the appliance under water or damaged, malfunctioning, disabling or bypassing control and safety devices.
- In case of danger, request intervention by qualified personnel.
- In case of danger, switch off the electrical power and gas supplies only if this can be done in total safety.



Gas component tightness

- Before performing any operation on gas ducting components, close the gas valve.
- Upon completing any procedure, perform the leak check according to regulations in force.



Gas smell

If you smell gas:

- Do not use electrical devices such as telephones, multimeters or other equipment that may cause sparks next to the appliance.
- Shut off the gas supply by turning the valve off.
- Switch off the power supply via the external disconnect switch in the power supply electrical panel.
- Use a telephone away from the appliance to ask for intervention from qualified personnel.



Electrocution hazard

- Disconnect the electrical power supply before any operation on appliance components.

- For electrical connections exclusively use compliant components and according to the specifications provided by the manufacturer.
- Ensure the appliance cannot be accidentally switched back on.



Connection and disconnection

For the Link electrical connection and disconnection operations follow the procedure described in Paragraph 7.1.1 p. 42.



Earthing

Electrical safety depends on effective earthing system, correctly connected to the appliance and installed according to the regulations in force.



Distance from combustible or flammable materials

Do not deposit flammable materials (paper, diluents, paints, etc.) near the appliance.



Acid flue gas condensate

If condensing units are present in the Link:

- Discharge the acid condensate of combustion flue gas in compliance with current exhaust regulations.



Switching the appliance off

Disconnecting the power supply while the appliance is running may cause permanent damage to internal components.

- Except in the event of danger, do not disconnect the power supply to switch off the appliance, but always and exclusively act through the provided control device.



In the event of failure

Operations on internal components and repairs may exclusively be carried out by a TAC, using only original spare parts.

- In the event of a failure of the Link, or of one or more of the individual modules that make it up and/or break parts of it, refrain from any repair or restoration attempt and contact the TAC immediately.



Routine maintenance

Proper maintenance assures the efficiency and good operation of the appliance over time.

- Maintenance must be performed according to the manufacturer's instructions (see Chapter 7 p. 42) and in compliance with current regulations.
- Appliance maintenance and repairs may only be entrusted to firms legally authorised to work on gas appliances and systems.
- Enter into a maintenance contract with an authorised specialised firm for routine maintenance and for servicing in case of need.
- Use only original parts.



Maintenance of GAHP/GA/AY modules

For the maintenance of the individual GAHP/GA/AY modules making up the Link, refer to their respective

manuals.



Decommissioning and disposal

If the Link, or even one or more of the individual GAHP/GA/AY modules that make it up, is to be disposed of, contact the manufacturer for its disposal.



Keep the Manual

This Installation, use and maintenance manual, including all the documents relating to the individual GAHP/GA/AY modules that make it up, must always accompany the appliance and must be handed to the new owner or installer in the event of sale or removal.

regulations and with the manufacturer's directions/instructions shall be disclaimed.



In particular, the warranty on the appliance may be rendered void by the following conditions:

- Incorrect installation.
- Misuse.
- Failure to comply with the manufacturer's indications on installation, use and maintenance.
- Alteration or modification of the product or any part thereof.
- Extreme operational conditions or however outside of the operational ranges set forth by the manufacturer.
- Damages caused by external agents such as salts, chlorine, sulphur or other chemical substances contained in the installation water or present in the air of the installation site.
- Abnormal actions transmitted to the appliance by the plant or installation (mechanical stresses, pressure, vibrations, thermal expansion, electrical surges...).
- Accidental damages or due to force majeure.

III.2 COMPLIANCE

III.2.1 EU directives and standards

The GAHP/GA/AY modules that make up the Link, namely the GAHP series gas absorption heat pumps, GA series gas absorption chillers, and AY series condensing boilers comply with the essential requirements of the following standards and directives, each as applicable:

- ▶ Efficiency Directive 92/42/EEC and subsequent modifications and additions.
- ▶ 2016/426/EU "Gas Appliances Regulation" as amended and added.
- ▶ 2014/30/EC "Electromagnetic Compatibility Directive" as amended and added.
- ▶ 2014/35/EC "Low Voltage Directive" as amended and added.
- ▶ 2014/68/EU "Pressure Equipment Directive" as amended and added.
- ▶ 811/2013/EU "Energy-Related Products regulation" as amended and added.
- ▶ 813/2013/EU "Ecodesign requirements regulation" as amended and added.

Furthermore, they comply with the requirements of the following standards, as far as they are applicable to the manufacturer:

- ▶ EN 12309 appliances for gas-fired heating and/or cooling absorption.
- ▶ EN 378 Refrigerating systems and heat pumps.
- ▶ EN 15502 Gas-fired central heating boilers.

III.2.2 Other applicable provisions and standards

The design, installation, operation and maintenance of the systems shall be carried out in compliance with current applicable regulations, depending on the Country and location, and in accordance with the manufacturer's instructions. In particular, regulations regarding the following shall be complied with:

- ▶ Gas systems and equipment.
- ▶ Electrical systems and equipment.
- ▶ Heating and air conditioning systems, heat pumps and chillers.
- ▶ Environmental protection and flue gas exhaust.
- ▶ Fire safety and prevention.
- ▶ Any other applicable law, standard and regulation.

III.3 EXCLUSIONS OF LIABILITY AND WARRANTY



Any contractual or extra-contractual liability of the manufacturer for any damage caused by incorrect installation and/or improper use and/or failure to comply with

1 FEATURES AND TECHNICAL DATA



For the characteristics of the individual GAHP/GA/AY modules that make up the Link, and of the control devices, please refer to their respective manuals.

1.1 FEATURES

The Link are gas-fired heating/cooling groups, to supply hot and/or chilled water. Each Link consists of a number of individual gas-fired heating/cooling modules (GAHP/GA/AY modules). The set of appliances and components is preassembled at the factory, forming a complete hydronic group already prepared to be connected to the system.

1.1.1 Application

Each Link, according to its configuration (Link condensing boilers, heat pumps, chillers, chiller-heaters) can simultaneously or alternately provide space heating, cooling, DHW production and heat recovery, according to the needs of each installation, with a considerable extension of heating and cooling output. The various hydronic models are suitable for all heating and cooling systems operating with hot and/or chilled water, with standard terminals (e.g. radiators, fan coils, radiant panels, fan heaters, air handling units, DHW buffer tanks, swimming pool heat exchangers, ...), including process systems (industrial heat exchangers).

1.1.2 Manufacturing features

Each Link, in addition to the GAHP/GA/AY gas-fired heating/cooling modules, consists of:

- ▶ outlet/inlet stainless steel hydraulic manifolds, insulated with rigid cups lined with aluminum sheet
- ▶ galvanized steel gas outlet manifold
- ▶ flexible couplings of individual modules to hydraulic and gas manifolds
- ▶ condensate drain manifold (only if there are at least two condensing appliances GAHP A Plus/GAHP GS/WS Plus/AY)
- ▶ electrical panel with protection devices (2 electrical panels with more than 6 modules)
- ▶ bearing structure with galvanized steel sections

The Link equipped with water pumps are also equipped with a check valve, mounted downstream of each water pump, and a protection for the pump body.

1.1.3 Configuration

The gas heating/cooling modules that make up a Link can be:

- ▶ GAHP appliances: gas absorption heat pumps versions A/AR/GS/WS
- ▶ GA appliances, absorption chillers versions ACF/HR/TK/HT/LB
- ▶ AY appliances, versions AY 35/AY 50/AY 100, condensing boilers

GAHP and GA appliances can be further distinguished into:

- ▶ aerothermal appliances (A, AR, ACF, HR, TK, HT, LB)
- ▶ hydrothermal (WS) and geothermal (GS) appliances

The number of modules is variable:

- ▶ from 2 to 5 in the case of GAHP/GA only
- ▶ from 2 to 7 in the case of GAHP/GA and AY

The Link with aerothermal appliances must be installed exclusively outdoors. In contrast, the others, whether equipped with AY boilers or not, can be installed both outdoors and indoors (using the specific indoor versions).

The aerothermal modules of Links may be in configuration:

- ▶ with standard fans
- ▶ with silenced fans (S or S1)

As regards the water circuit, the Link can be:

- ▶ Without water pumps or with oversize water pumps.
- ▶ 2, 4 or 6 pipes, ie 1, 2 or 3 pairs of delivery/return hydraulic collectors/connections for hot and/or cold water, connected as needed.

1.2 CIRCULATING PUMPS

1.2.1 Link without water pumps

If the Link is without circulators, It must be installed on the hydraulic/primary circuit at least one circulation pump, suitably selected and rated (by the designer/installer).

The water pump (flow and head) must be selected and installed based on the pressure drops of the plumbing/primary circuit (piping + components + exchange terminals + appliance), to ensure the nominal water flow required for the appliance to function correctly.

Refer to Paragraph 1.12.1 p. 23 for appliance pressure drops.



If at least one boiler AY is provided on the Link, it is not possible to install the Link without independent water pumps for each module.

1.2.2 Link with water pumps

In Link already equipped with water pumps, each individual GAHP/GA/AY module that is part of the Link has an individual, independent, high-efficiency fixed-flow water pump.



The water pumps of the GAHP/GA modules are installed externally and equipped with a special protective cover. For the AY modules, the water pumps are installed inside the module itself.

1.3 DESCRIPTION OF THE LINK

Each Link is described by a series of letters and digits that distinguish its composition and configuration. In order:

1. Description and composition of the Link:

- LINK (always present if several modules are preassembled).
- (13 to 23 letters) = type of Link according to constituent modules:
 - CONDENSING BOILERS (if the Link only consist of AY boilers)
 - HEAT PUMPS (if at least one GAHP A Plus, GAHP AR Plus, GAHP GS/WS Plus module is present on the Link)
 - CHILLERS (if the Link only consist of GA modules, excluding ACF60-00 HR modules)
 - CHILLER-HEATERS (if on the Link are present GA modules combined with AY boilers, or ACF60-00 HR modules, eventually combined with GA modules)

- (3 to 33 letters) = composition of the Link (number of modules followed by module type). Modules are ordered as follows: GAHP A Plus, GAHP AR Plus, GA ACF, ACF60-00 HR, AY 100, AY 50, AY 35. The letter "S" that may be present after the module type identifies the modules that are connected to the separate circuit, which are listed after those connected to the base circuit, with the same sorting criteria for the modules.

2. (2 digits) = nominal cooling output, given by the sum of the

nominal cooling outputs of the individual modules. If the Link does not provide cooling, 00 is indicated

3. (3 digits) = nominal heat output, given by the sum of the nominal heat outputs of the individual modules. If the Link does not provide for heating, 00 is indicated
4. (, /4 or /6) = number of pipes, i.e. outlet/inlet manifold pairs (1, 2 or 3)
5. (, S, S1) = fans, standard, low-noise or brushless low-noise (only for aerothermal appliances)
6. (3 letters) = fuel gas
7. (2 letters) = country of destination
8. (2 letters) = water pumps (without or oversized)
9. (6 or 7 letters) = only for Link of GAHP GS/WS Plus heat pumps: outdoor or indoor version

Table 1.1 p. 9 exemplifies the meaning of the encoding in detail, providing the key for reading any possible composition and configuration, starting from an example.

It should be noted that the number of modules of a specific type on the Link is determined indirectly via the heating and cooling output value, which always identifies only one possible module combination.

The example shows a LINK HEAT PUMPS 1ARH 1CFH 1HRH 1AYH100S 1AYH50S 1AYH35S 52-241 /6 S MET CH WW, which is decoded as follows:


1. (LINK HEAT PUMPS 1ARH 1CFH 1HRH 1AYH100S 1AYH50S 1AYH35S) = Link consisting of (1 GAHP AR Plus, 1 ACF60-00, 1 ACF60-00 HR) on the base circuit and (1 AY 100, 1 AY 50, 1 AY 35) on the separate circuit.
2. (52) = nominal cooling output (A35W7) in kW, resulting from the sum of: 16,9 kW for the GAHP AR Plus module, 17,7 kW for the ACF60-00 module and 17,7 kW for the ACF60-00 HR module.
3. (241) = nominal heat output (A7W35) in kW, resulting from the sum of: 38,8 kW for the module GAHP AR Plus, 21,0 kW for the module ACF60-00 HR, 98,4 kW for the module AY 100, 49,2 kW for the module AY 50 and 33,3 kW for the module AY 35.
4. (/6) = water circuit with three separate pipe pairs (heating/cooling, DHW and heat recovery).
5. (S) = GAHP/GA modules are equipped with a low-noise fan.
6. (MET) = the Link is preset for natural gas supply.
7. (CH) = the country of destination is Switzerland.
8. (WW) = the Link is equipped with oversized water pumps for each module on all circuits (base+separable and recovery).
9. () = not being a Link of GAHP GS/WS Plus this field is empty.

Figure 1.1 Link description encoding matrix

LINK	HEAT PUMPS	1ARH 1CFH 1HRH 1AYH100S 1AYH50S 1AYH35S	Code	Series	Description	Composition																	
1	Module	Label	FGAA FGAR FGCF FGCF FECC FHRE FHAR FFRE FARC FARE FHFE FHCF FGFE FGWS FGCS FRAE FRFE FGHA FAAR FAAE FGHE	LINK (+ description + quantities and models for base and any separate circuit)	HEAT PUMPS	A Plus																	
					HEAT PUMPS	AR Plus																	
					CHILLERS	ACF (no HR)																	
					CHILLER-HEATERS	HR																	
					CONDENSING BOILERS	AY																	
					HEAT PUMPS	HR-AR Plus-AY																	
					HEAT PUMPS	HR-AR Plus																	
					HEAT PUMPS	HR-AR Plus-ACF-AY																	
					HEAT PUMPS	AR Plus-ACF																	
					HEAT PUMPS	AR Plus-AY																	
					CHILLER-HEATERS	HR-ACF-AY																	
					CHILLER-HEATERS	HR-ACF																	
					CHILLER-HEATERS	ACF-AY																	
					HEAT PUMPS	WS Plus																	
					HEAT PUMPS	GS Plus																	
					HEAT PUMPS	AR Plus-A Plus-AY																	
					HEAT PUMPS	ACF-AR Plus-AY																	
					HEAT PUMPS	HR-A Plus																	
					HEAT PUMPS	A Plus-AR Plus																	
					HEAT PUMPS	A Plus-AY																	
					CHILLER-HEATERS	HR-AY																	
					2	Cooling output	Heating output	52	2	Module	kW												
										ACF	17.7												
										HR	17.7												
TK	17.7																						
HT	17.1																						
LB	13.3																						
AR Plus	16.9																						
GS Plus	16.9																						
WS Plus	19.3																						
A Plus	0																						
AY	0																						
Module	kW																						
ACF	0																						
HR	21.0																						
TK	0																						
HT	0																						
LB	0																						
AR Plus	38.8																						
A Plus	44.6																						
AY35	33.3																						
AY50	49.2																						
AY100	98.4																						
WS Plus	45.3																						
GS Plus	43.0																						
3	Pipes	Description	241	3	2 pipes																		
					4 pipes	/4																	
					4+2 (HR+AY)	/6																	
					Version	Description																	
					standard	S																	
					low-noise	S1																	
					brushless																		
					Gas type	Description																	
					G20	MET																	
					G31	G31																	
					Description	Country of destination																	
					IT	Italy																	
					DE	Germany																	
					CH	Switzerland																	
					AT	Austria																	
					DK	Denmark																	
					HU	Hungary																	
					RO	Romania																	
					RU	Russia																	
					FA	France Air																	
					FR	France																	
					HR	Croatia																	
					ES	Spain																	
					CZ	Czech Republic																	
PL	Poland																						
EN	Generic export																						
BE	Belgium																						
NL	Netherlands																						
GB	United Kingdom																						
4	Water pumps	Type	/6	4	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source																	
					without water pumps	SC	N	N															
					oversized water pump	CW	W	W															
					Version	Description																	
					only for GS/WS indoor	INDOOR																	
					only for GS/WS outdoor	OUTDOOR																	
					5	Version	Description	S1	5	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source												
										without water pumps	SC	N	N										
										oversized water pump	CW	W	W										
										Version	Description												
										only for GS/WS indoor	INDOOR												
										only for GS/WS outdoor	OUTDOOR												
										6	Version	Description	MET	6	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source							
															without water pumps	SC	N	N					
															oversized water pump	CW	W	W					
															Version	Description							
															only for GS/WS indoor	INDOOR							
															only for GS/WS outdoor	OUTDOOR							
															7	Version	Description	CH	7	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
8	Version	Description	VW	8																Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
					9	Version	Description	S1	9											Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
										10	Version	Description	CH	10						Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
															11	Version	Description	VW	11	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
12	Version	Description	S1	12																Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
					13	Version	Description	MET	13											Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
										14	Version	Description	CH	14						Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
															15	Version	Description	VW	15	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
16	Version	Description	S1	16																Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
					17	Version	Description	MET	17											Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
										18	Version	Description	CH	18						Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
															19	Version	Description	VW	19	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
20	Version	Description	S1	20																Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
					21	Version	Description	MET	21											Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
										22	Version	Description	CH	22						Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
															23	Version	Description	VW	23	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
24	Version	Description	S1	24																Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
					25	Version	Description	MET	25											Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
										26	Version	Description	CH	26						Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
															27	Version	Description	VW	27	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
28	Version	Description	S1	28																Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
					29	Version	Description	MET	29											Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
										30	Version	Description	CH	30						Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
															31	Version	Description	VW	31	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
32	Version	Description	S1	32																Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
					33	Version	Description	MET	33											Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
										34	Version	Description	CH	34						Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
															35	Version	Description	VW	35	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
36	Version	Description	S1	36																Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
					37	Version	Description	MET	37											Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
										38	Version	Description	CH	38						Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
															39	Version	Description	VW	39	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
40	Version	Description	S1	40																Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
					41	Version	Description	MET	41											Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
										42	Version	Description	CH	42						Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
															43	Version	Description	VW	43	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
44	Version	Description	S1	44																Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
					45	Version	Description	MET	45											Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
										46	Version	Description	CH	46						Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
															47	Version	Description	VW	47	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
48	Version	Description	S1	48																Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
					49	Version	Description	MET	49											Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
										50	Version	Description	CH	50						Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
															51	Version	Description	VW	51	Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
52	Version	Description	S1	52																Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N
																				oversized water pump	CW	W	W
																				Version	Description		
																				only for GS/WS indoor	INDOOR		
																				only for GS/WS outdoor	OUTDOOR		
					53	Version	Description	MET	53											Link without HR heating/cooling	Description Link with HR or GS/WS heating/cooling recovery/source		
																				without water pumps	SC	N	N


1.4 HYDRAULIC/GAS CONNECTIONS

Figure 1.2 Position of connections for a Link of condensing boiler only - 2-pipe - Right-hand side view

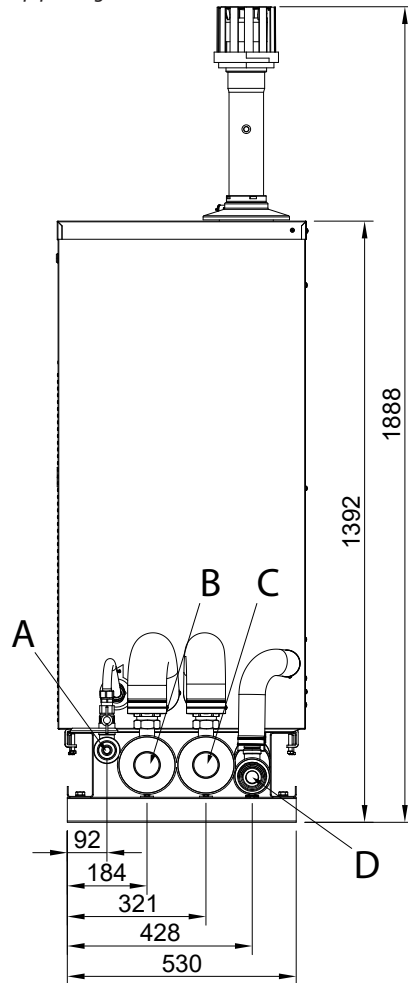


- | | | | |
|---|---------------------------|---|-------------------------------------------------------------------------------------------|
| A | Gas connection [1 1/2" F] | D | Condensate drain connection [1" F]. Sloping manifold, must be connected on the right side |
| B | Hot water return [2" M] | | |
| C | Hot water outlet [2" M] | | |

Figure 1.3 Position of connections for a Link of condensing boiler only - 4-pipe - Right-hand side view

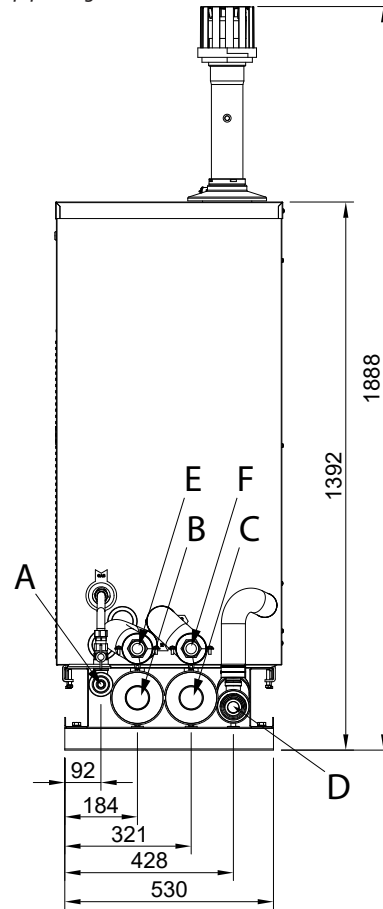


- | | | | |
|---|-------------------------------------------------------------------------------------------|---|--------------------------------------------------------------------------------------|
| A | Gas connection [1 1/2" F] | E | Separate boiler hot water inlet [1 1/4" F for AY 35 and AY 50, 1 1/2" F for AY 100] |
| B | Hot water return [2" M] | F | Separate boiler hot water outlet [1 1/4" F for AY 35 and AY 50, 1 1/2" F for AY 100] |
| C | Hot water outlet [2" M] | | |
| D | Condensate drain connection [1" F]. Sloping manifold, must be connected on the right side | | |

Figure 1.4 Position of connections for a 2-pipe Link - Right-hand side view

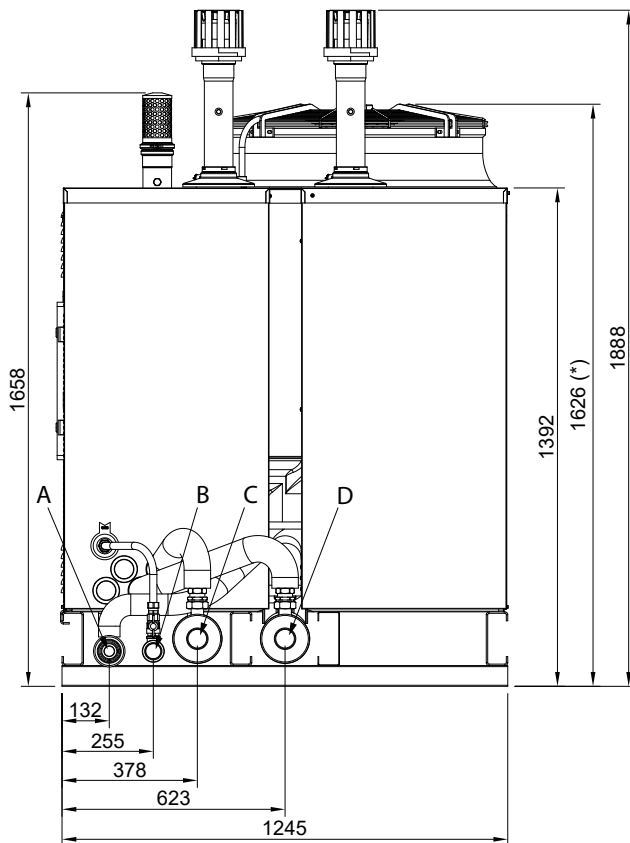


- A Condensate drain connection [1" F] (only for Link with more than one condensing module). Sloping manifold, must be connected on the right side
- B Gas connection [1 1/2" F]
- C Hot/Cold water outlet [2" M]
- D Hot/Cold water inlet [2" M]
- * The height of standard models is 1562 mm

Figure 1.5 Position of connections for a 4-pipe Link with a single AY boiler on the separate circuit - Right-hand side view

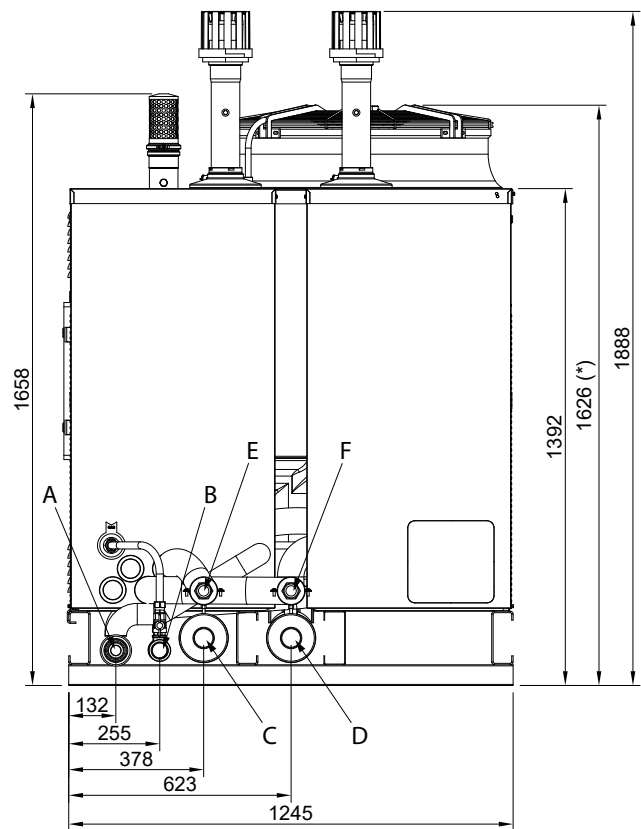


- A Condensate drain connection [1" F] (only for Link with more than one condensing module). Sloping manifold, must be connected on the right side
- B Gas connection [1 1/2" F]
- C Hot/Cold water outlet [2" M]
- D Hot/Cold water inlet [2" M]
- E Separate boiler hot water outlet [1 1/4" F for AY 35 and AY 50, 1 1/2" F for AY 100]
- F Separate boiler hot water inlet [1 1/4" F for AY 35 and AY 50, 1 1/2" F for AY 100]
- * The height of standard models is 1562 mm

Figure 1.6 Position of connections for a 4-pipe Link with several AY boilers on the separate circuit - Right-hand side view

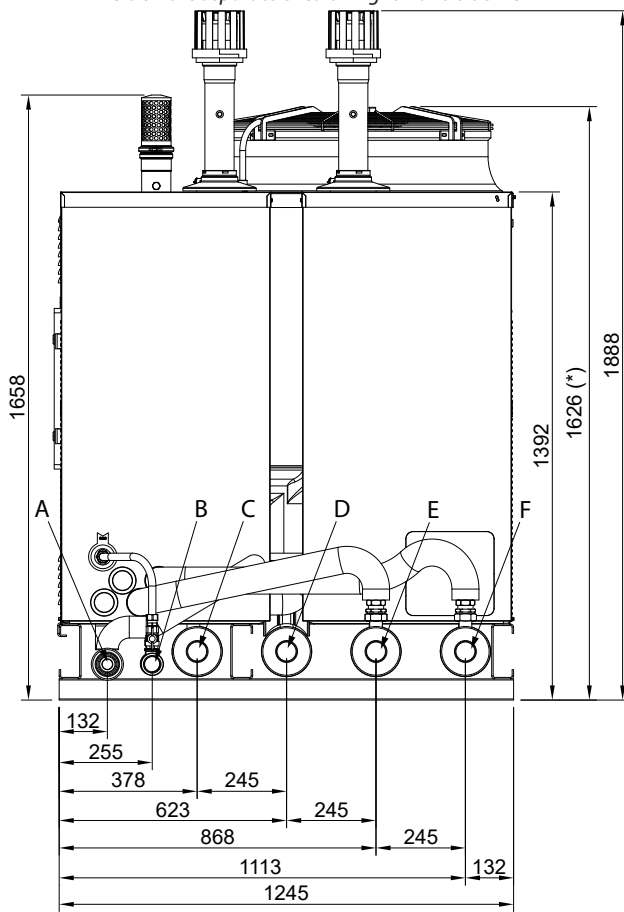


- A Condensate drain connection [1" F]. Sloping manifold, must be connected on the right side
- B Gas connection [1 1/2" F]
- C Hot/Cold water outlet [2" M]
- D Hot/Cold water inlet [2" M]
- E Separate boilers hot water inlet [2" M]
- F Separate boilers hot water outlet [2" M]
- * The height of standard models is 1562 mm

Figure 1.7 Position of connections for a 4-pipe Link of ACF HR only

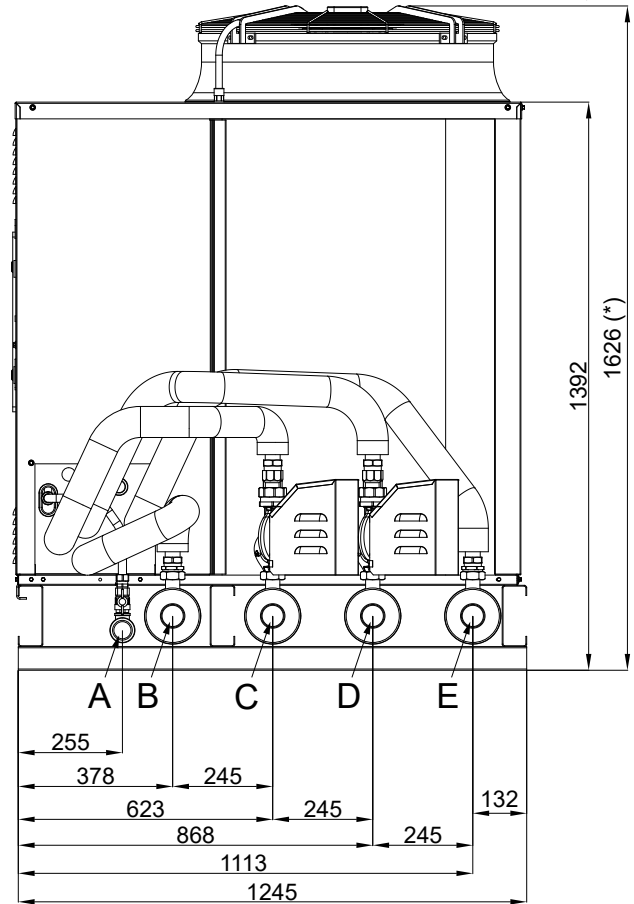


- A Gas connection [1 1/2" F]
- B Cold water outlet [2" M]
- C Cold water inlet [2" M]
- D ACF HR heat recovery hot water inlet [2" M]
- E ACF HR heat recovery hot water outlet [2" M]
- * The height of standard models is 1562 mm

Figure 1.8 Position of connections for a Link of GAHP GS/WS - Right-hand side view

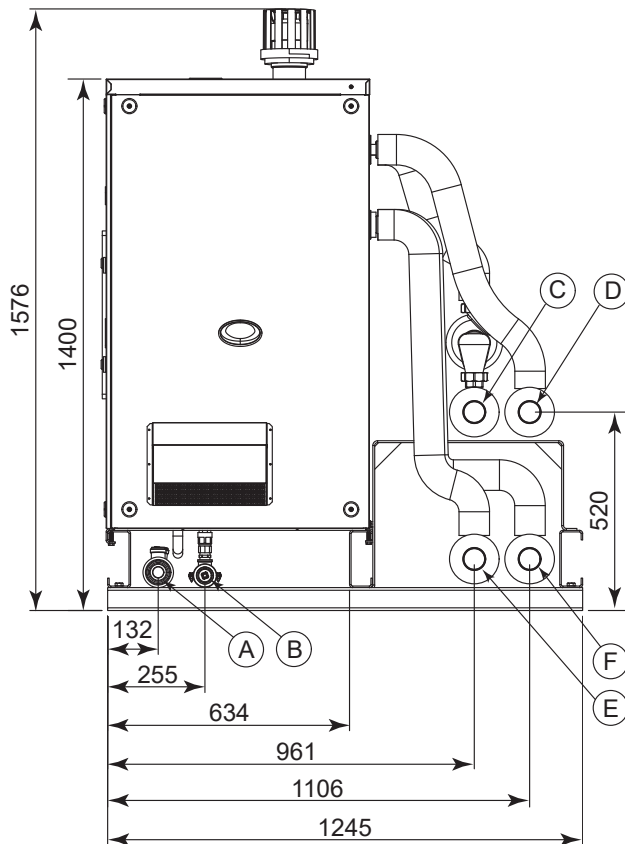


- | | | | |
|---|-------------------------------------------------------------------------------------------|---|--------------------------|
| A | Condensate drain connection [1" F]. Sloping manifold, must be connected on the right side | C | Hot water return [2" M] |
| B | Gas connection [1 1/2" F] | D | Cold water inlet [2" M] |
| | | E | Hot water outlet [2" M] |
| | | F | Cold water outlet [2" M] |

Figure 1.9 Position of connections for a 6-pipe Link with a single AY boiler on the separate circuit - Upper view

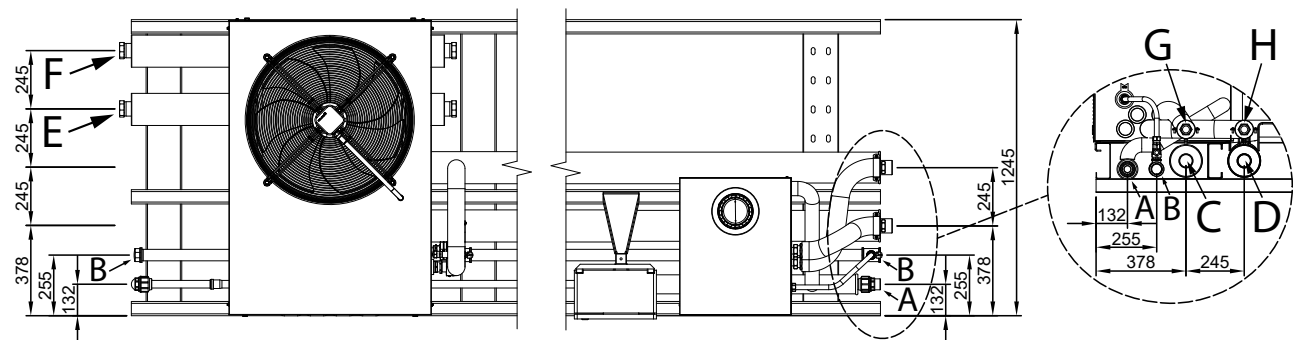

- | | | | |
|---|------------------------------------------------------------------------------------------------------------------------------------------------|---|--------------------------------------------------------------------------------------|
| A | Condensate drain connection [1" F] (only for Link with more than one condensing module). Sloping manifold, must be connected on the right side | F | ACF HR heat recovery hot water outlet (left connection only) [2" M] |
| B | Gas connection [1 1/2" F] | G | Separate boiler hot water inlet [1 1/4" F for AY 35 and AY 50, 1 1/2" F for AY 100] |
| C | Hot/Cold water outlet [2" M] | H | Separate boiler hot water outlet [1 1/4" F for AY 35 and AY 50, 1 1/2" F for AY 100] |
| D | Hot/Cold water inlet [2" M] | | |
| E | ACF HR heat recovery hot water inlet (left connection only) [2" M] | | |

Figure 1.10 Position of connections for a 6-pipe Link with several AY boilers on the separate circuit - Upper view

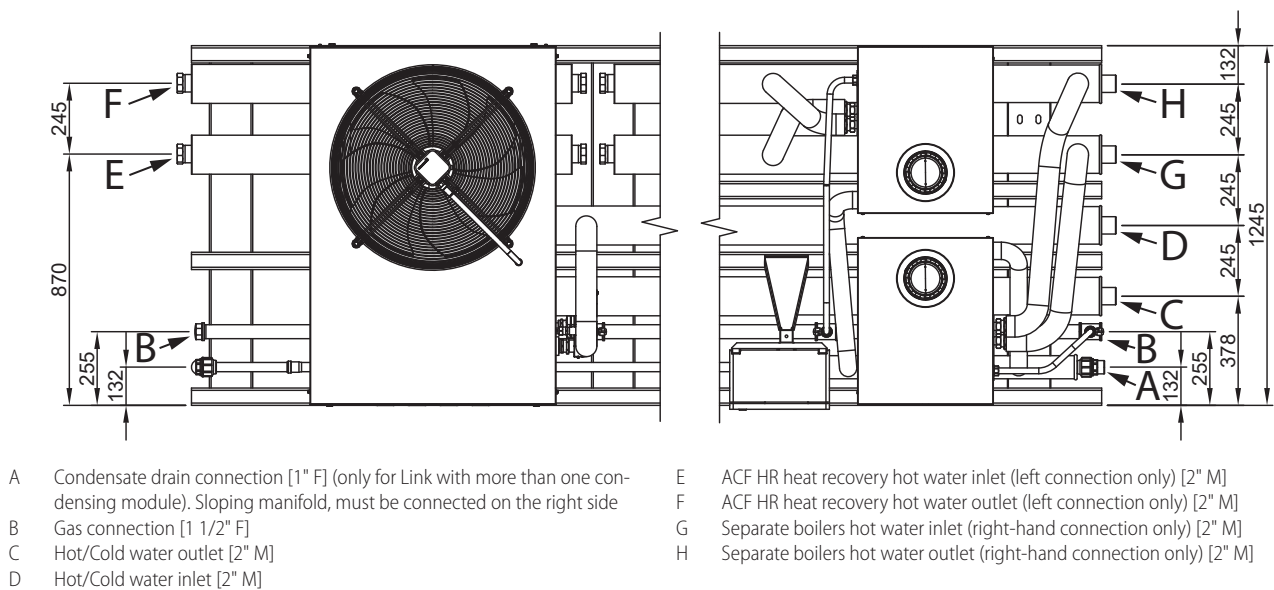

1.5 DIMENSIONS



The dimensions are given for the maximum footprint configuration. For the specific dimensions of the Link please refer to the technical data sheet (Paragraph 1.12 p. 23) or the Robur technical service.



Please refer to Paragraph 1.4 p. 10 for the depth and detail of hydraulic connections.

Figure 1.11 Dimensions of a Link with 2 GAHP/GA modules

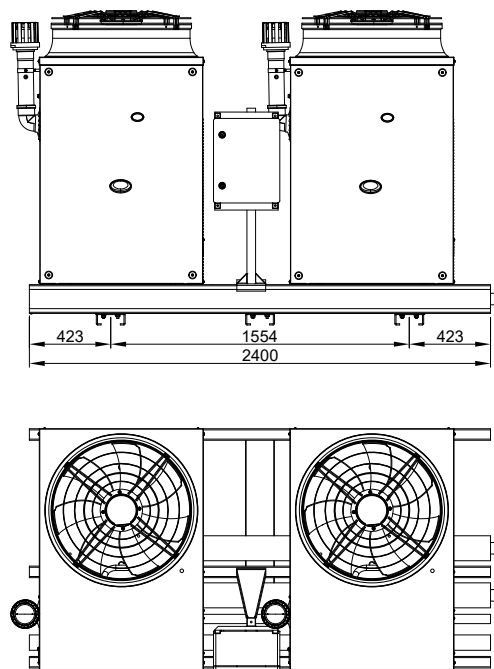


Figure 1.12 Dimensions of a Link with 3 GAHP/GA modules

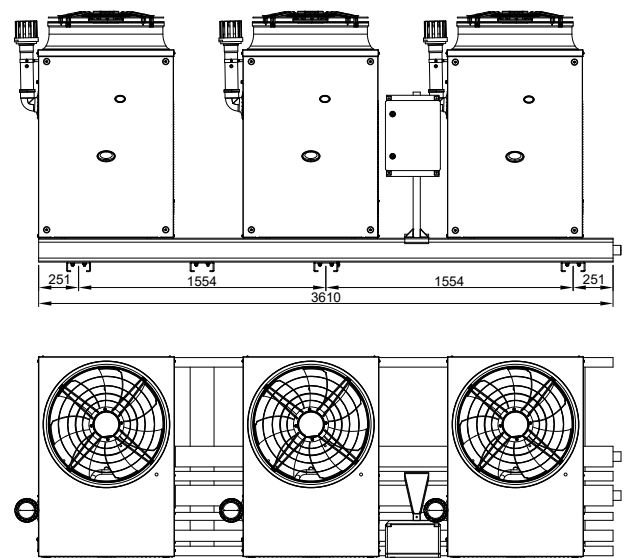


Figure 1.13 Dimensions of a Link with 4 GAHP/GA modules

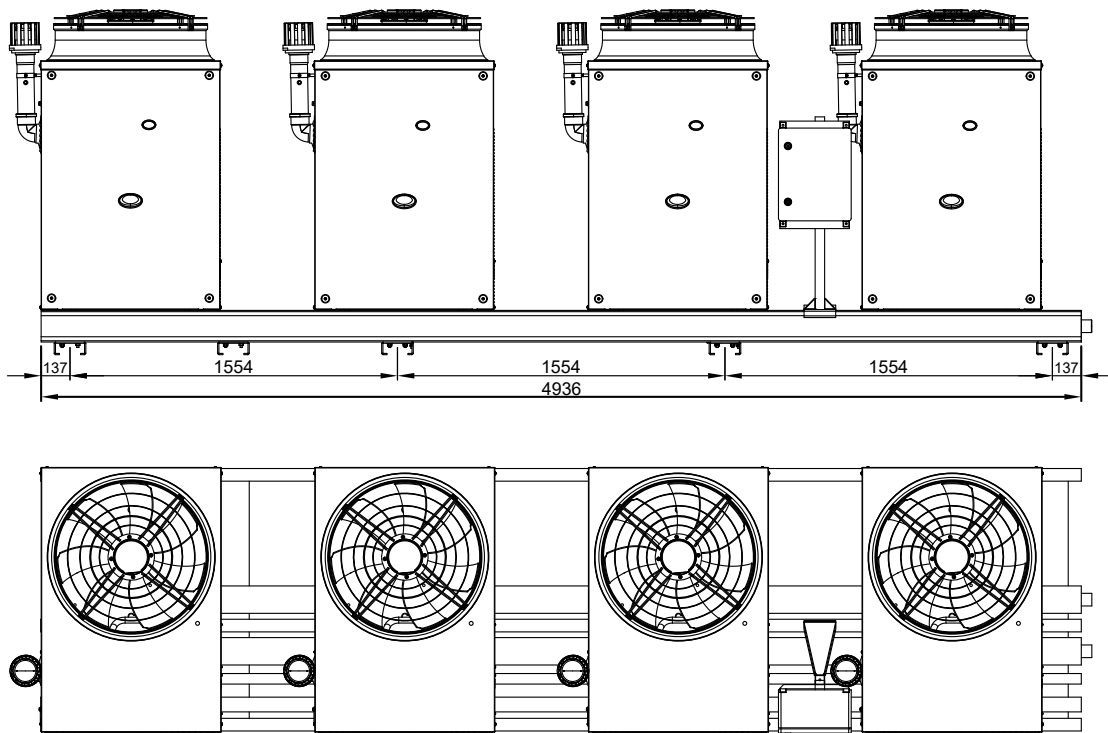


Figure 1.14 Dimensions of a Link with 5 GAHP/GA modules

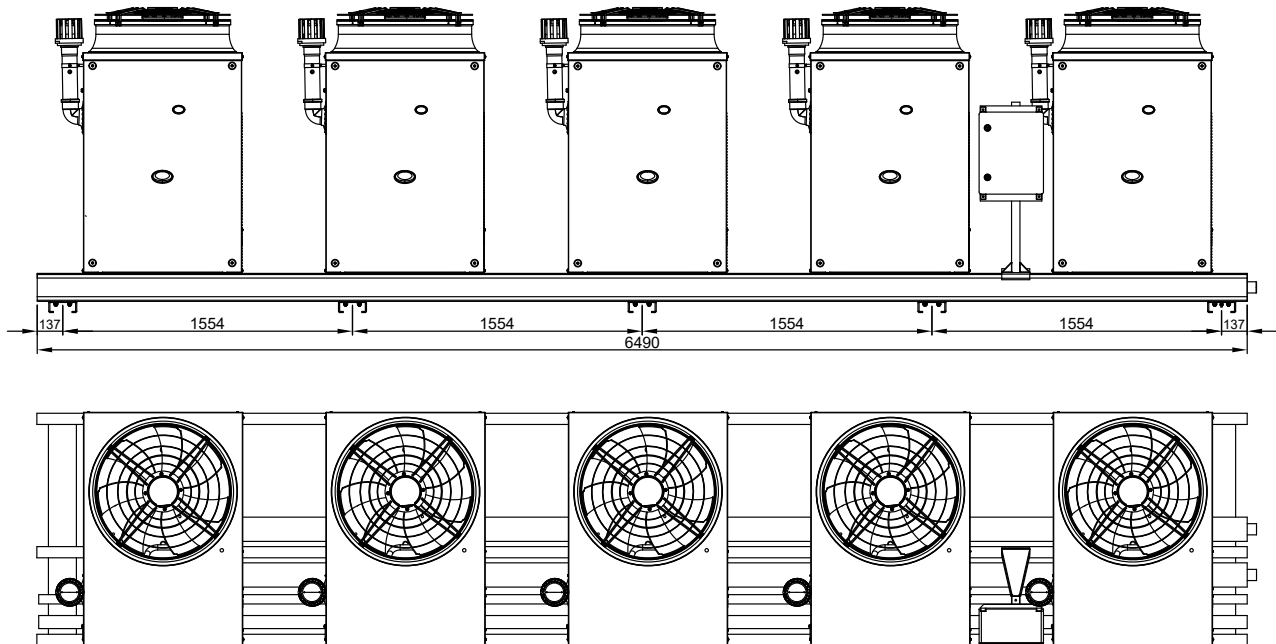


Figure 1.15 Dimensions of a Link of 2 AY 35/50 condensing boilers

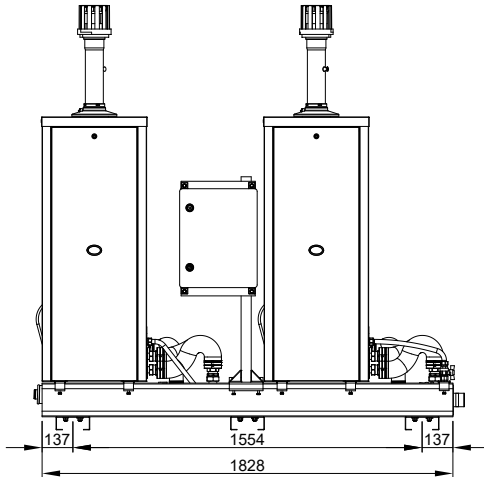


Figure 1.17 Dimensions of a Link of 2 AY 100 condensing boilers

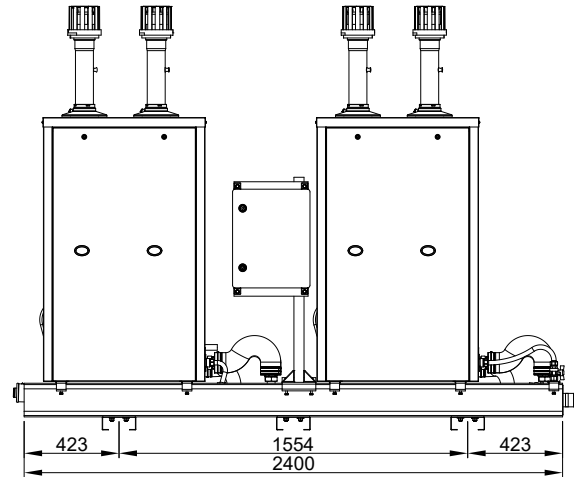


Figure 1.16 Dimensions of a Link of 1 AY 35/50 + 1 AY 100 condensing boilers

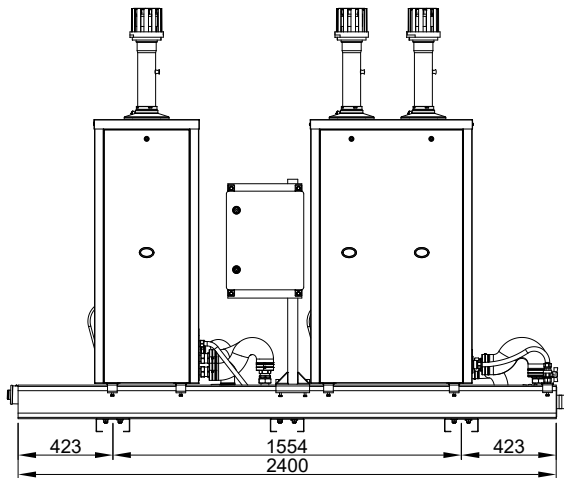


Figure 1.18 Dimensions of a Link with 1 ACF/A/AR + 1 AY 100 + 1 AY 35/50 - front and top view

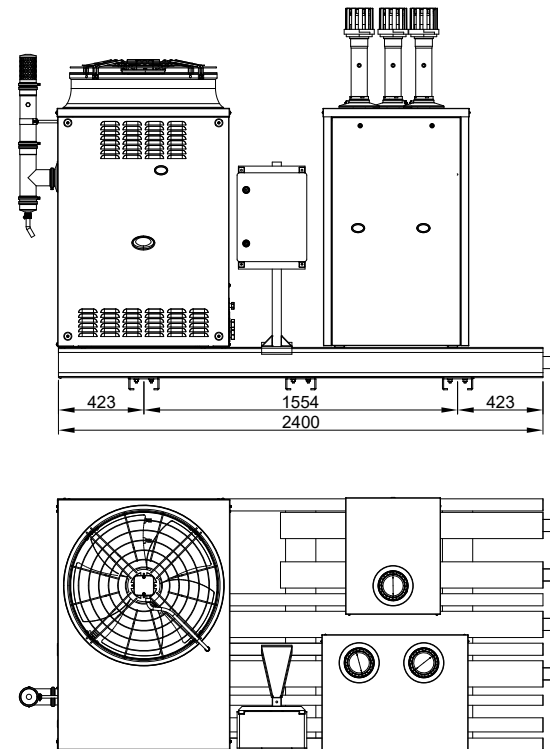


Figure 1.19 Dimensions of a Link with 1 ACF/A/AR + 1 AY 100 + 2 or 3 AY 35/50 - front and top view

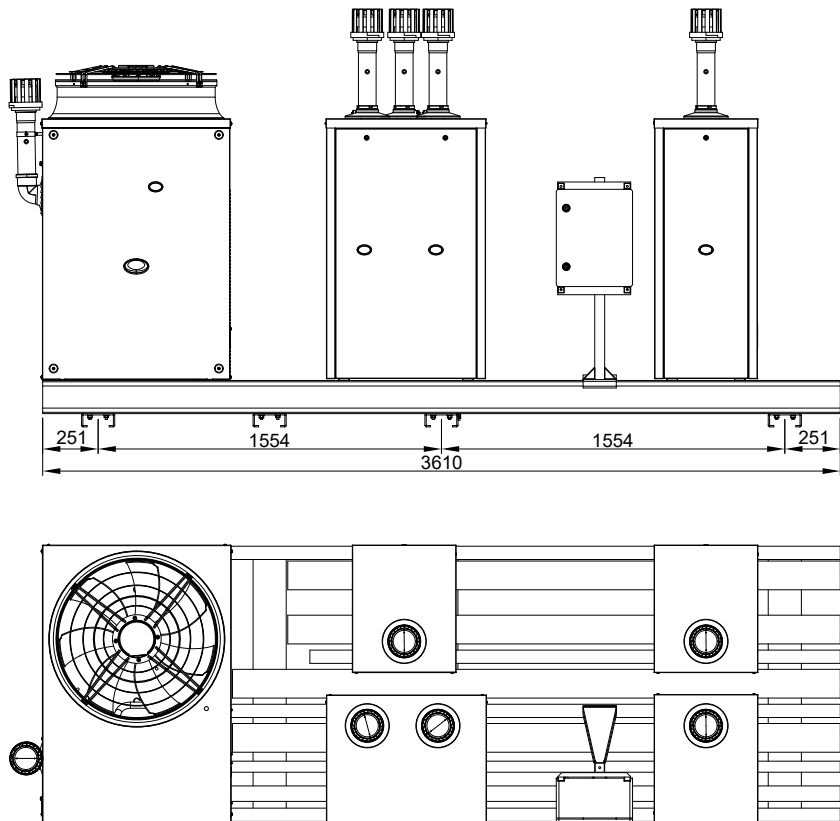


Figure 1.20 Dimensions of a Link with 2 ACF/A/AR + 2 AY 100 - front and top view

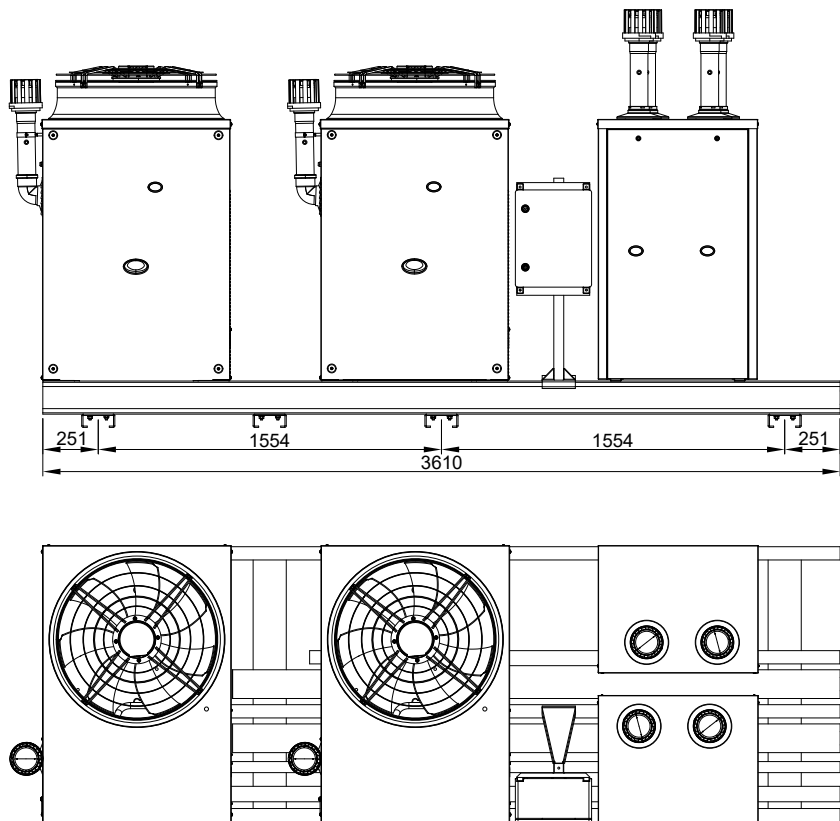


Figure 1.21 Dimensions of a Link with 3 ACF/A/AR + 1 AY 35/50 + 1 AY 100 - front and top view

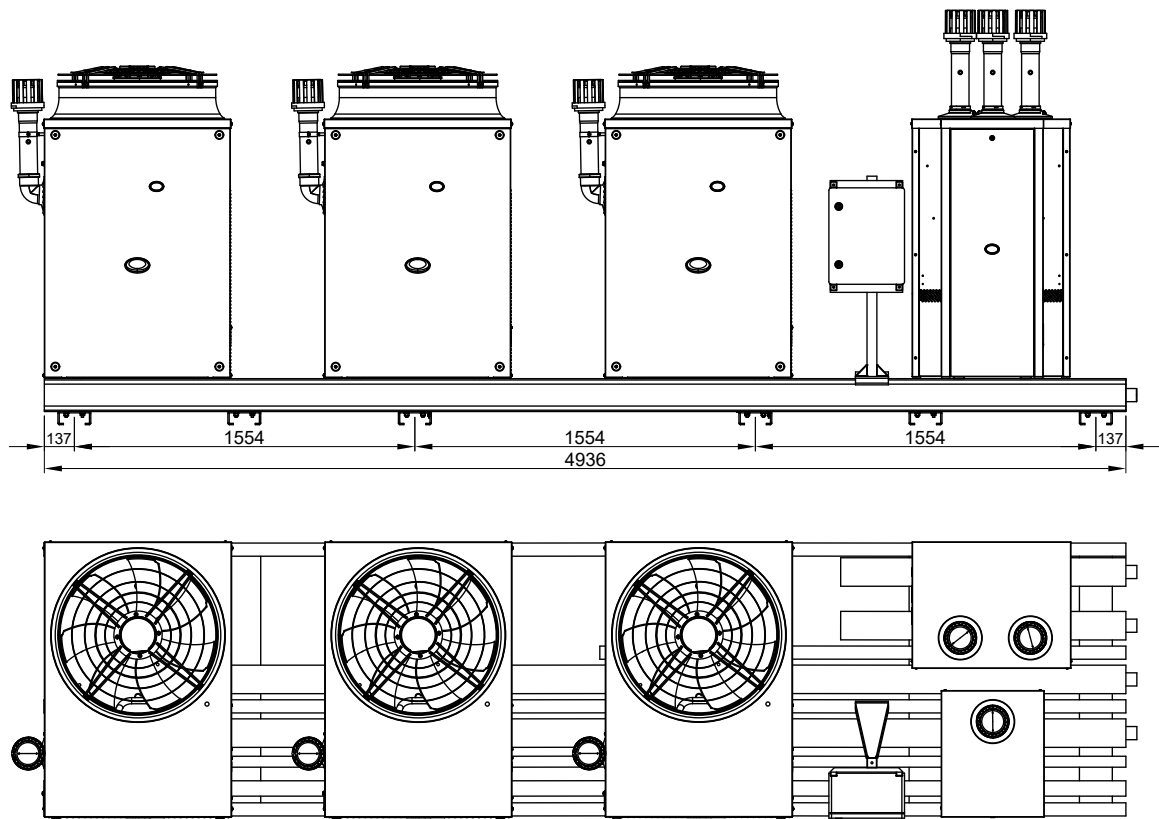


Figure 1.22 Dimensions of a Link with 2 ACF/A/AR + 2 or 3 AY 35/50 + 1 AY 100 - front and top view

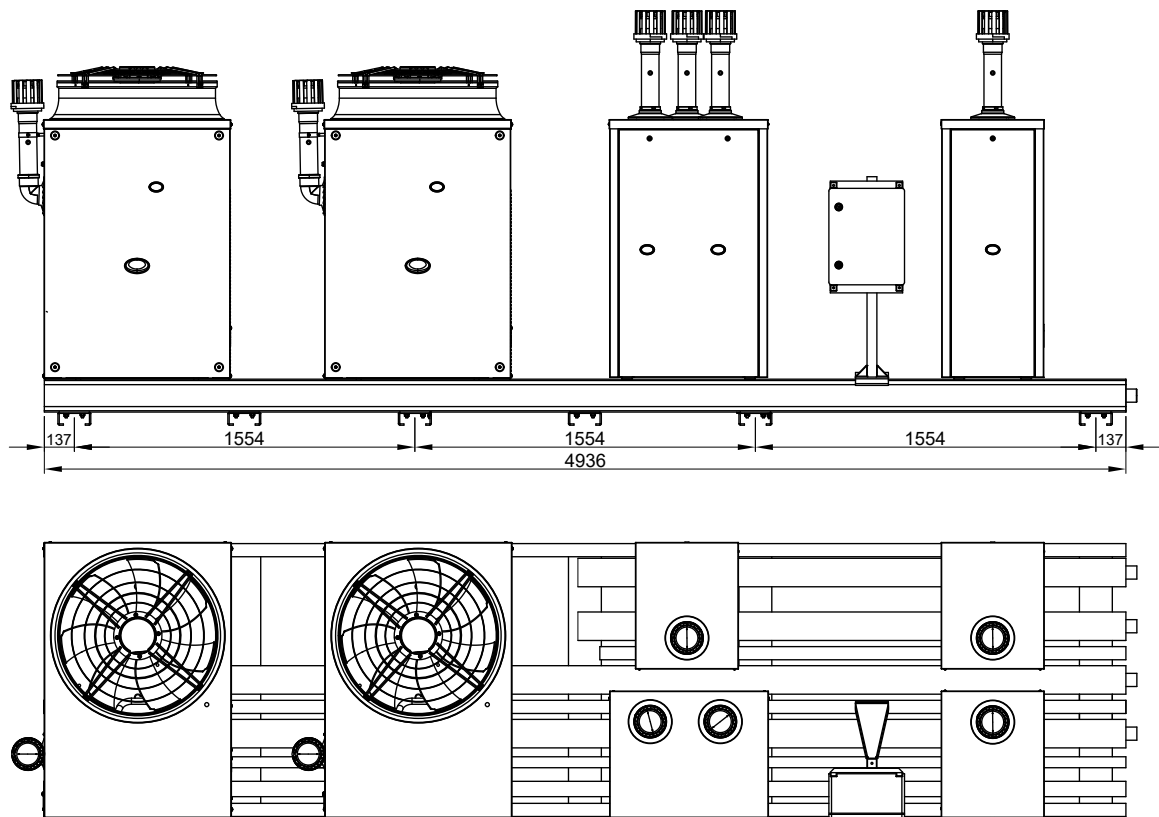


Figure 1.23 Dimensions of a Link with 3 ACF/A/AR + 3 or 4 AY 35/50 - front and top view

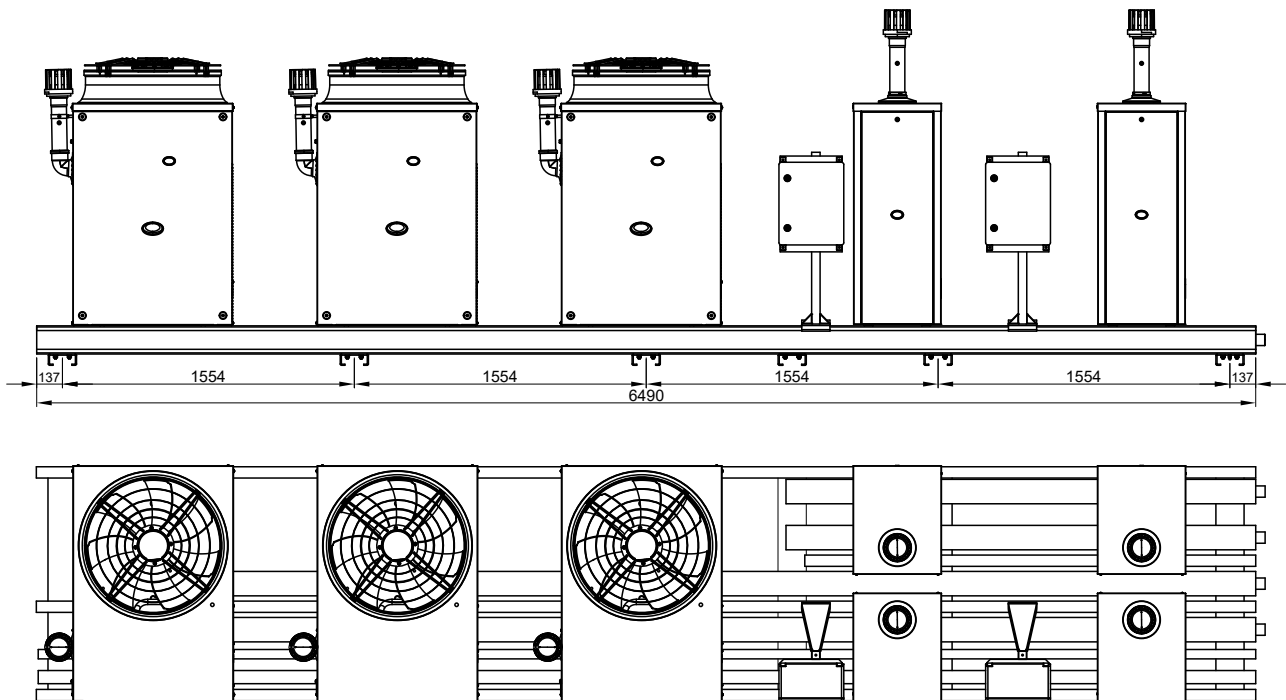


Figure 1.24 Dimensions of a Link with 3 ACF/A/AR + 2 AY 100 - front and top view


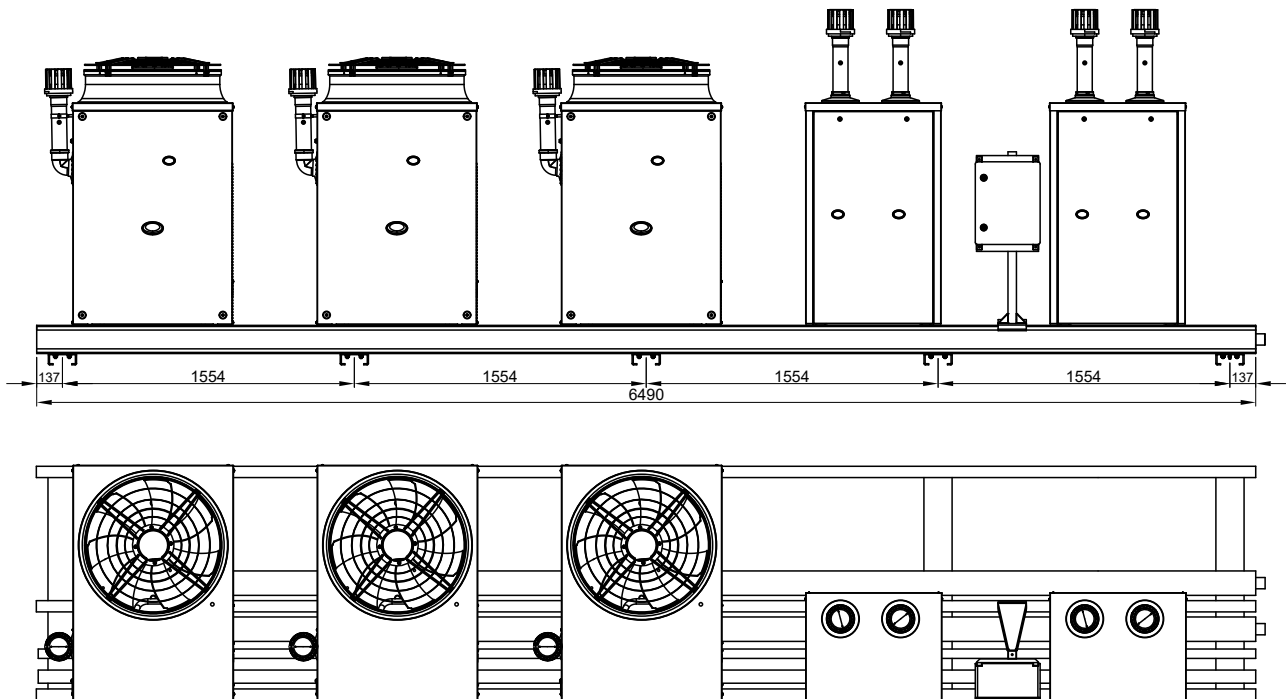


Figure 1.25 Dimensions of a Link with 4 ACF/A/AR + 1 AY 100 + 1 AY 100S - front and top view

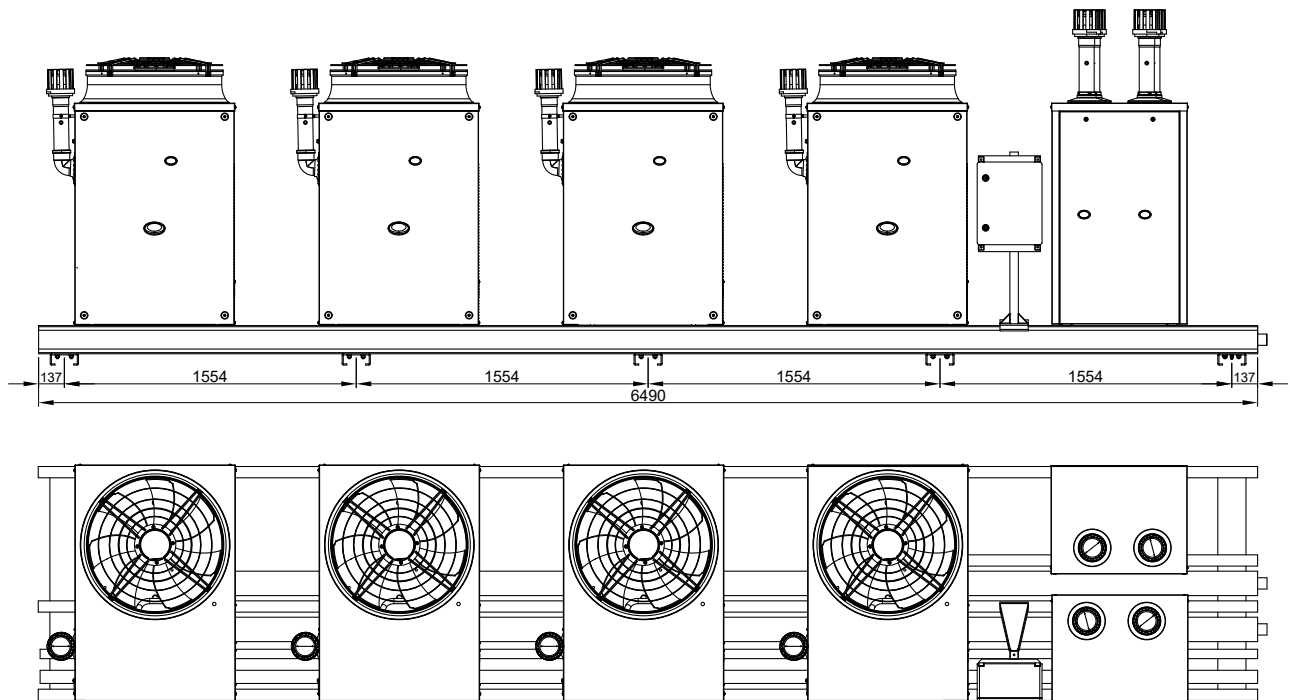

1.6 EQUIPMENT OF A LINK WITH WATER PUMPS

The Link equipped with water pumps are also equipped with a check valve, mounted downstream of each water pump, and a protection for the pump body.

1.6.1 "Roma" check valve

The Link equipped with water pumps are also equipped with a check valve, mounted downstream of each water pump, equipped with air vent valves, as detailed in the following Figure 1.26 p. 20 for the GAHP/GA modules and in the following Figure 1.27 p. 21 for the AY modules.

Exceptions are some Link for which the "Oventrop" check valve is used (Paragraph 1.6.2 p. 21).

Figure 1.26 GAHP/GA module's Roma valve


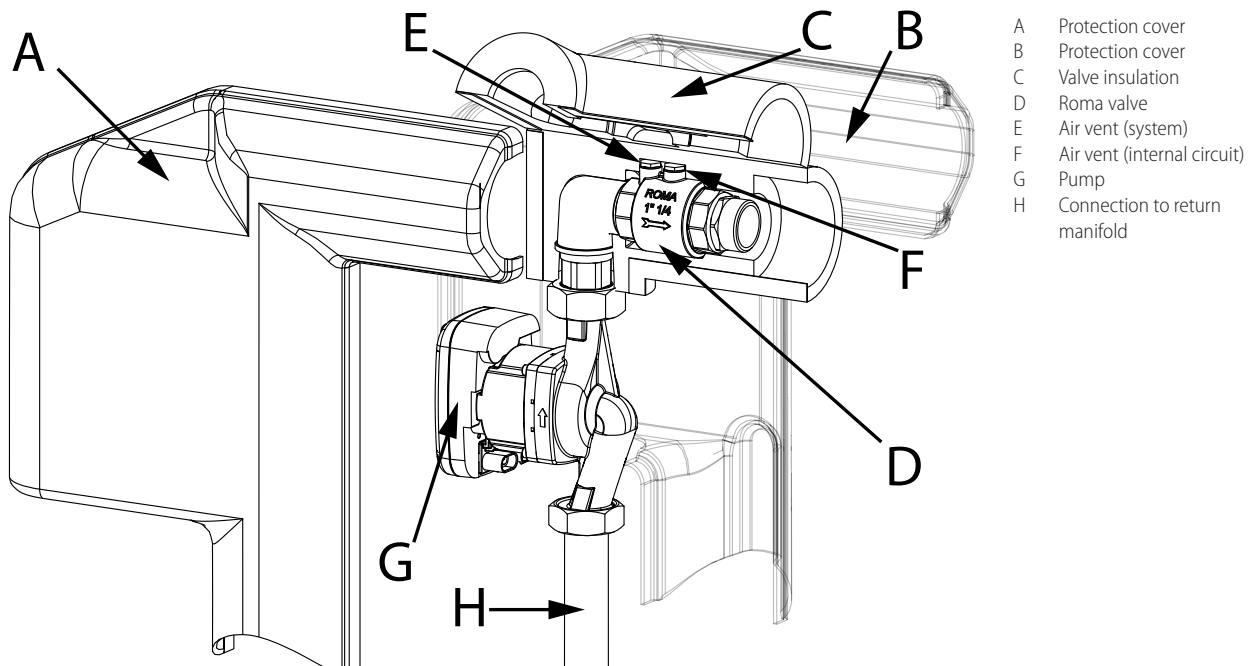


Figure 1.27 Water pump/Roma valve assembly on AY module

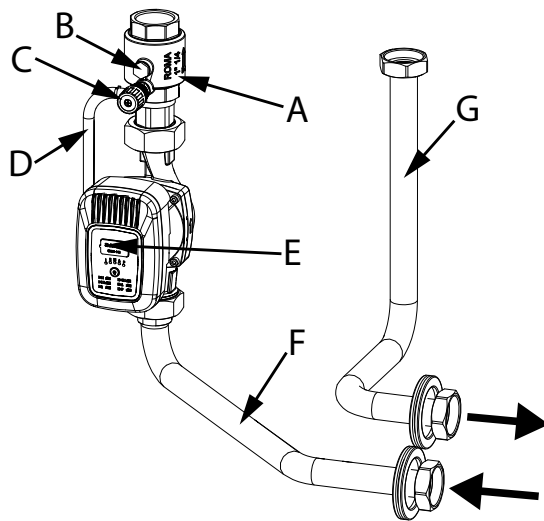

- | | | | |
|---|-----------------------------|---|---------------|
| A | Roma valve | E | Pump |
| B | Air vent (internal circuit) | F | Return pipe |
| C | Air vent (system) | G | Delivery pipe |
| D | Flexible hose | | |

mixed modules are equipped with an isolation valve on the inlet of each module that cannot always operate simultaneously with the other modules.

More in detail, Link of heat pumps consisting of GAHP-AR + GA modules have the isolation valves on the GA modules, as these must be excluded in heating mode.

1.8 ELECTRICAL SPECIFICATIONS


1.8.1 Electrical panel of the Link

Up to 6 GAHP/GA/AY modules on the Link there is only one electrical panel, detailed in Figure 1.29 p. 22 below. In the presence of more than 6 GAHP/GA/AY modules on the Link there are two electrical panels, of which the main one (the one in which the electrical connections for power supply and control are to be made) is the one on the left, while the one on the right is dedicated to the AY boilers.

1.6.2 "Oventrop" check valve

On Link of GAHP GS/WS modules and on Link with up to 4 ACF60-00 HR modules of the same type, the "Oventrop" check valve with metal pump protection is fitted, as detailed in Figure 1.28 p. 21 below.


Figure 1.28 Oventrop valve

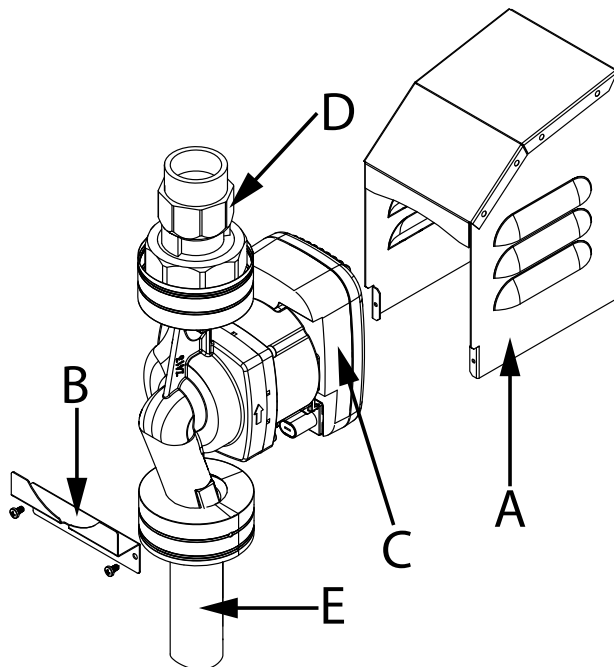

- | | | | |
|---|----------------------------------|---|----------------|
| A | Protection cover | C | Pump |
| B | Protection cover closing element | D | Oventrop valve |
| | | E | Return pipe |

1.7 EQUIPMENT OF A LINK WITHOUT WATER PUMPS

Link without independent water pumps that are made up of

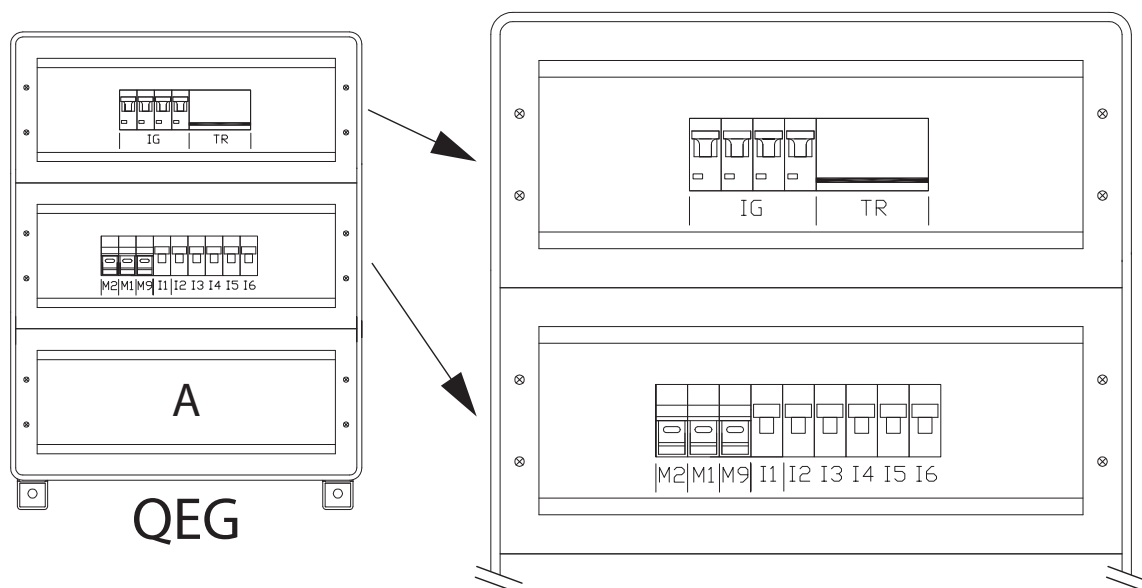Figure 1.29 Electrical panel of the Link

- A Blind panel (Figure 4.1 p. 33 for detail of internal terminal blocks)
 I1 Magnetothermic breaker of the "ID00" module
 I2 Magnetothermic breaker of the "ID01" module
 I3 Magnetothermic breaker of the "ID02" module
 I4 Magnetothermic breaker of the "ID03" module
 I5 Magnetothermic breaker of the "ID04" module
 I6 Magnetothermic breaker of the "ID05" module
 IG Electrical panel switch disconnecter

- TR Transformer 230/24 Vac
 M9 Transformer primary fuse
 M2 Condensate heating resistance protection fuse
 M9 Transformer secondary fuse
 QEG Link electrical panel

Note: the components within the electrical panel may have an order and/or position other than the one shown in the figure

1.8.2 Power supply

The power supply of the Link is 400 V three-phase or 230 V single-phase.

1.8.3 Protection rating

The Link has a protection rating IP 25.

1.9 ELECTRONIC BOARDS

Each GAHP/GA/AY module belonging to the Link has one or more electronic boards inside. The boards are pre-wired, interconnected and connected to the electrical panel of the Link via a CAN bus signal cable. For the characteristics of the boards, see the manuals of the individual GAHP/GA/AY modules.

1.10 OPERATION MODE

Depending on the type, the GAHP/GA/AY modules in a Link can operate in one of the two following modes:

1. **ON/OFF**, i.e. on (at full power) or off, with water pump at constant or variable flow.
2. **MODULATING**, i.e. with modulating heat input, with water pump at constant or variable flow.

The GAHP A Plus and GAHP GS/WS Plus modules can operate in both mode 1 and mode 2 and can modulate from 100% to 28% nominal heat input.

The GAHP AR Plus modules can operate in both mode 1 and mode 2 and can modulate from 100% to 46% nominal heat input.

The AY modules can only operate in mode 2 and can modulate with a ratio of 1:9 (AY 35), 1:10 (AY 50), 1:20 (AY 100).

The GA modules can only operate in mode 1.

For each mode, specific control systems and devices are provided (Paragraph 1.11 p. 22).

1.11 CONTROLS

1.11.1 Control device

The Link may only work if it is connected to a control device, selected from:

- DDC panel
- CCI panel

1.11.2 DDC control panel

The DDC control panel allows one or more Robur appliances to be controlled in modulating mode (GAHP heat pumps in heating mode, AY boilers) or ON/OFF (GA chillers).



Modulation management with the DDC control panel is only possible with the latest versions of the DDC control panel FW: from FW version 4.019 for AY boilers and from FW version 4.021 for GAHP heat pumps.

The main functions are:

- Adjustment and control of one (or more) Robur appliances of the absorption line (GAHP, GA, AY).
- Data display and parameters setting.
- Time programming.
- Heating curve control.
- Diagnostics.
- Errors reset.
- Possibility to interface with a BMS.
- Possibility of coupling with remote monitoring and management systems.

DDC control panel functionality may be extended with auxiliary Robur devices RB100 and RB200 (e.g. service requests, DHW production, third party generator control, probe control, system valves or water pumps,...).



For further details, please refer to the manuals of the DDC control panel, the RB100 and RB200 devices, and the Abso Pro design manual.

1.11.3 CCI control panel

The CCI control panel can manage up to 3 GAHP appliances in modulating mode (i.e. only GAHP A Plus/GAHP GS/WS Plus for heating only).

The main functions of the CCI control panel are:

- ▶ Adjustment and control of up to three Robur heat pumps (GAHP A Plus or GAHP GS/WS Plus) of the same type, with modulation control of the appliances.
- ▶ Data display and parameters setting.
- ▶ Manifold water temperature probe interface.
- ▶ Diagnostics.
- ▶ Errors reset.
- ▶ Possibility to interface with a BMS.



For further details, please refer to the CCI control panel and the Abso Pro design manual.

1.12 TECHNICAL DATA

Together with the Link a datasheet dedicated to the specific configuration chosen will be provided.

Please refer to the technical data of the individual GAHP/GA/AY modules that make up the Link for more details on the charac-

teristics of each individual module.

1.12.1 Pressure drops



Please refer to the Abso Pro design manual for more detailed information on calculating the pressure drop or residual head of a Link.

1.12.1.1 Link without water pumps

For Link without water pumps, the datasheet supplied with the specific configuration shows the pressure drop value calculated in the most unfavourable condition, considering both the contribution of the individual modules and the pre-assembly.

1.12.1.2 Link with water pumps

The available head at the hydraulic connections of the Link, published in the technical data for Link with independent water pumps, is considered net of the internal pressure drops of the appliances and water manifolds.

Table 1.1 p. 23 provides the minimum residual head at nominal flow in the configuration with the highest pressure drops.

Table 1.1 Minimum residual head at nominal flow rate

	residual head [bar]
Oversize water pumps	0,34
Oversized water pumps (only for the heating circuit of the GAHP WS Plus modules)	0,20

2 TRANSPORT AND POSITIONING

2.1 WARNINGS



Damage from transport or installation

The manufacturer shall not be liable for any damage during appliance transport and installation.



On-site inspection

- Upon arrival at the site, ensure there is no transport damage on packing, Link, metal panels or finned coils of the appliances that make it up.
- After removing the packing materials, ensure the appliance is intact and complete.



Packing

- Only remove the packing after placing the appliance on site.
- Do not leave parts of the packing (plastic, polystyrene, nails, etc.) within the reach of children, as they are potentially dangerous.



Weight

- The crane and lifting equipment must be suitable for the load.
- Do not stand under suspended loads.




For the weight of the Link please refer to the supplied datasheet.

2.2 HANDLING AND LIFTING

- ▶ Always handle the appliance in a horizontal position.
- ▶ To lift the appliance use straps or slings inserted in the holes of the base (Figure 2.1 p. 23).
- ▶ Use lifting beams to avoid damaging the outer panels and the finned coils (Figure 2.1 p. 23)
- ▶ Comply with safety regulations at the installation site.

Figure 2.1 Instruction for lifting

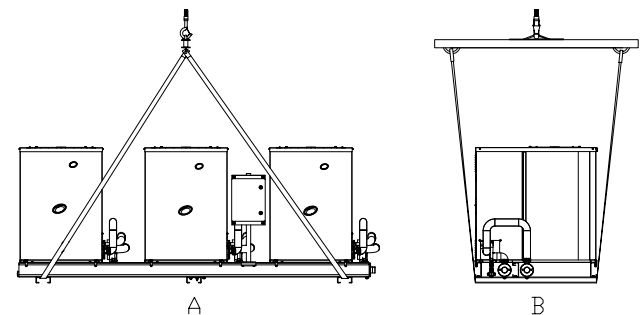

A Front view

B Side view



In the event of handling with forklift or pallet truck, comply with the handling instructions shown on the packing.

2.3 APPLIANCE POSITIONING



Do not install the aerothermal appliances indoors

Aerothermal appliances include devices equipped with finned coils and fan, approved for outdoor installation.

- Do not install inside a room, not even if it has openings.
- In no event start the appliance inside a room.



Ventilation of aerothermal appliances

- Aerothermal appliances require a large space, ventilated and free from obstacles, to enable smooth flow of air to the finned coils and free air outlet above the mouth of the fan, with no air recirculation.
- Incorrect ventilation may affect efficiency and cause damage to the appliance.
- The manufacturer shall not be liable for any incorrect choices of the place and setting of installation.

2.3.1 Where to install the Link for outdoor versions

In general:

- The appliance may be installed at ground level, on a terrace or on a roof, compatibly with its dimensions and weight.
- It must be out of the dripping line from gutters or similar. It does not require protection from atmospheric agents.
- No obstruction or overhanging structure (protruding roofs, eaves, balconies, ledges, trees) shall obstruct the exhaust fumes.
- The flue gas exhausts of the Link modules must not be located immediately adjacent to openings or air intakes of buildings, and must comply with relevant environmental and safety regulations.

In particular, for aerothermal appliances:

- They must be installed outside buildings, in an area of natural air circulation.
- No obstruction or overhanging structure (e.g. protruding roofs, canopies, balconies, ledges, trees) must interfere with the air flowing out from the top of the appliance.
- Do not install near the exhaust of flues, chimneys or hot polluted air. In order to work correctly, the appliance needs clean air.

2.3.2 Defrosting water drainage of aerothermal Link

In winter, in the aerothermal Link with GAHP A Plus/GAHP AR Plus modules, frost may form on the finned coils, and the modules perform defrosting cycles.

- To prevent overflowing and damage provide for a drainage system.

2.3.3 Acoustic issues

Pre-emptively assess the Link sound effect in connection to the site, taking into account that building corners, enclosed courtyards, and restricted spaces may amplify the acoustic impact due to the reverberation phenomenon.

2.3.4 Technical room requirements for hydrothermal or geothermal Links or boiler-only Links

Hydrothermal and geothermal Link (composed of GAHP GS/WS Plus modules) and AY boiler only Link can be installed indoors as well as outdoors.

In the event of indoor installation, the installation premises must comply with the applicable local standards.



Do not install inside a room that has no aeration openings.



Please refer to the individual GAHP GS/WS Plus and AY module manuals for further essential prescriptions about the technical room.

2.4 MINIMUM CLEARANCE DISTANCES

2.4.1 Distances from combustible or flammable materials

Keep the appliance away from combustible or flammable materials or components, in compliance with applicable regulations.

2.4.2 Clearances around the appliance


The minimum clearance distances shown in Figure 2.2 p. 24 (bar any stricter regulations) are required for safety, operation and maintenance.

The clearances indicated are for a single appliance, with at most one wall near the appliance that is higher than the appliance itself.



If there are two or more walls higher than the appliance and/or other appliances, please refer to the Abso Pro design manual.

Figure 2.2 Clearances

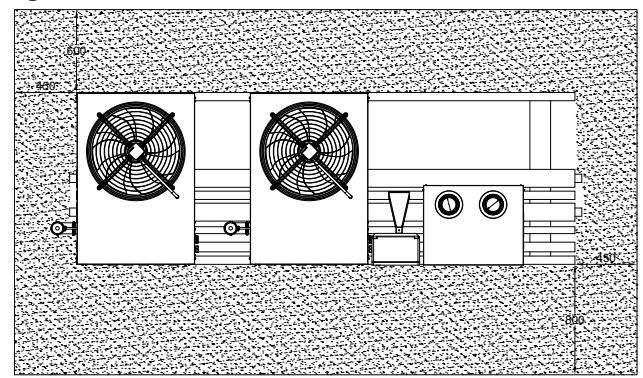

2.5 MOUNTING BASE

2.5.1 Mounting base constructive features

Place the appliance on a level flat surface made of fireproof material and able to withstand its weight.

2.5.2 Installation at ground level

Failing a horizontal support base, make a flat, level concrete base, at least 150 mm larger than the appliance on each side.

2.5.3 Installation on terrace or roof

- The structure of the building must support the total weight of the appliance and the supporting base.
- If necessary, provide a maintenance walkway around the appliance.

2.5.4 Anti vibration connections and mountings

Although the appliance's vibrations are minimal, resonance phenomena might occur in roof or terrace installations.

- Use anti-vibration mountings.
- Also provide anti-vibration joints between the appliance and water and gas pipes.

3 HEATING ENGINEER

3.1 WARNINGS



Read the warnings in Chapter III.1 p. 4, providing important information on regulations and on safety.



Compliance with installation standards

Installation must comply with applicable regulations in force, based on the installation Country and site, in matters of safety, design, implementation and maintenance of:

- heating systems
- cooling systems
- gas systems
- flue gas exhaust
- flue gas condensate drain



Installation must also comply with the manufacturer's provisions.

3.2 HYDRAULIC SYSTEM

3.2.1 Design and implementation

The system must be designed and realized in a congruent way with the features and functionality of the Link.

For the appropriate system design, the following must be considered:

- the properties of the individual GAHP/GA/AY modules that make up the Link
- the configuration of manifolds and hydraulic connections
- the presence (or not) of water pumps
- variable or constant flow operation of the appliance



For in-depth information, refer to the Abso Pro design manual and/or contact Robur technical service.

3.2.2 Primary and secondary circuit

In many cases it is advisable to divide the hydraulic system into two parts, primary and secondary circuit, uncoupled by a hydraulic separator, or possibly by a tank that also acts as inertial tank/buffer.

3.2.3 Water flow

The Link can be:

- already equipped with water pumps for each module (preferred configuration in many applications)
- or
- without water pumps, in which case it is required to install at least one common water pump, on the primary circuit (this choice should be carefully evaluated, discussing it in advance with Robur technical service)



If there is at least one AY boiler, it is mandatory to provide Link with water pumps for each individual module.

3.2.4 Minimum water content

A minimum volume of water in the primary circuit of at least

70 litres for each GAHP module must be ensured to absorb the thermal energy supplied by the module during the switching off phase.

High thermal inertia of the system favours efficient appliance operation. Very short ON/OFF cycles are to be avoided.

- If necessary, provide for an inertial volume, to be suitably sized (see Abso Pro design manual).

3.2.5 Hydraulic connections

3.2.5.1 Hydraulic connections

The configuration of the hydraulic connections depends on the composition of the Link. Refer to Paragraph 1.4 p. 10.

The following Table 3.1 p. 25 shows the dimensions of the hydraulic and condensate drain connections.

Table 3.1 Connections diameters

Gas connection	1 1/2" F
Cold/hot water connections	2" M
Condensate drain connection	1" F
Connection of a single AY on the separate circuit	1 1/4" F for AY 35 and AY 50 1 1/2" F for AY 100
Connection of more AY on the separate circuit	2" M
Recovery circuit connection	2" M
AY safety valve drain	outside Ø 20 mm, inside Ø 14 mm

The hydraulic connections of the base circuit (and of the separate circuit, if any) are only provided on the right side of the Link, as is any condensate drain for condensing modules. The hydraulic connections of the recovery circuit, if any, are only provided on the left side of the Link, except for Link of GA ACF HR modules only, where the hydraulic connections of the recovery circuit are also on the right.

Gas connection is always possible on both sides of the Link, except for Link of AY boilers only, where the gas connection is only provided on the right side of the Link.



Connect the outlet of each safety valve of any boiler on the Link to a suitable drain. The manufacturer is not liable for any damage caused by the opening of the safety valve in the event of system overpressure.

3.2.5.2 Hydraulic pipes, materials and features

Use pipes for heating/cooling installations, protected from weathering, insulated for thermal losses, with vapour barrier to prevent condensation.



Pipe cleaning

Before connecting the appliance, accurately wash the water and gas piping and any other system component, removing any residue.

3.2.5.3 Minimum components of primary plumbing circuit

Always provide, near the appliance:

- on water piping, both outlet and inlet
 2. antivibration joints on water fittings
 2. pressure gauges
 2. isolation ball valves
- on the inlet water piping
 1. separator filter
 1. flow regulation valve, if the circulation pump is with constant flow (only for Link without circulators)

1. water pump, towards the appliance (only for Link without water pumps)
- on the water outlet pipe (in the absence of AY boilers on the same pipe pair)
 1. safety valve (3,5 bar)
 1. expansion tank



The safety valve and expansion tank must be installed before any isolation valves, so that they cannot be excluded from the system connected to the appliance.



Each AY boiler is equipped with its own 10 l internal expansion tank and with a safety valve. Depending on the system water content, assess the need for additional expansion tanks.

3.2.6 Schematic hydraulic diagrams

Some schematic hydraulic diagrams are given below as examples.



Please refer to the Abso Pro design manual for further plumbing diagrams illustrating the many installation possibilities in which the Link can be used.

3.2.6.1 Hydraulic diagrams of Link with water pumps

Preferable in many applications. Some examples are shown in the figures 3.1 p. 26 and 3.2 p. 27.

For the maximum available pressure head see Table 1.1 p. 23.



If there is at least one AY boiler, it is mandatory to provide Link with water pumps for each individual module.

Figure 3.1 Example of hydraulic system diagram for connection of 1 Link, 2-pipe, with water pumps


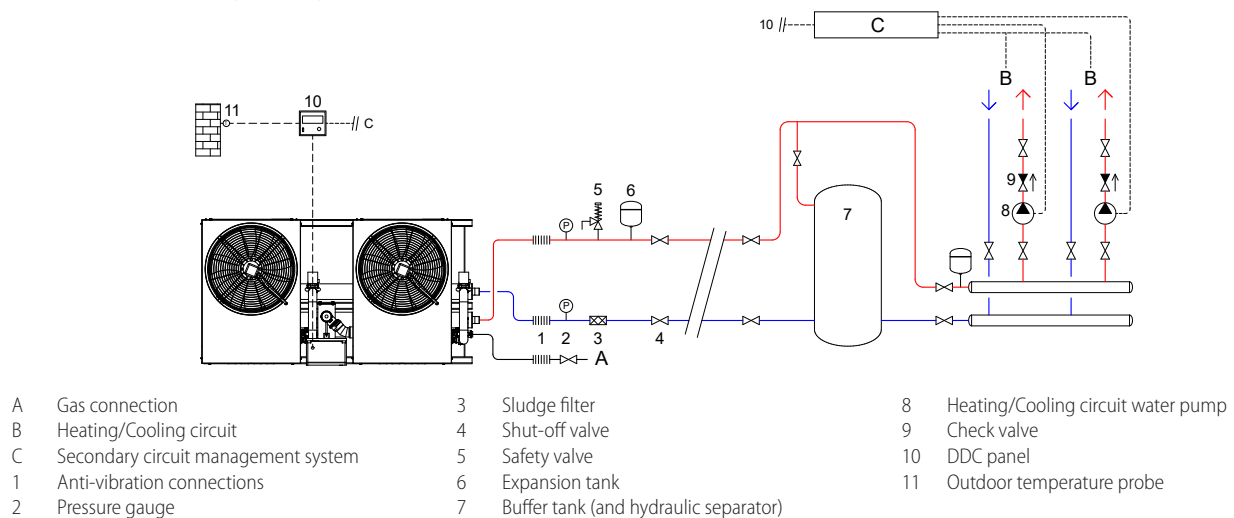


Figure 3.2 Example of hydraulic system diagram for connection of 2 Link, 2-pipe, with water pumps

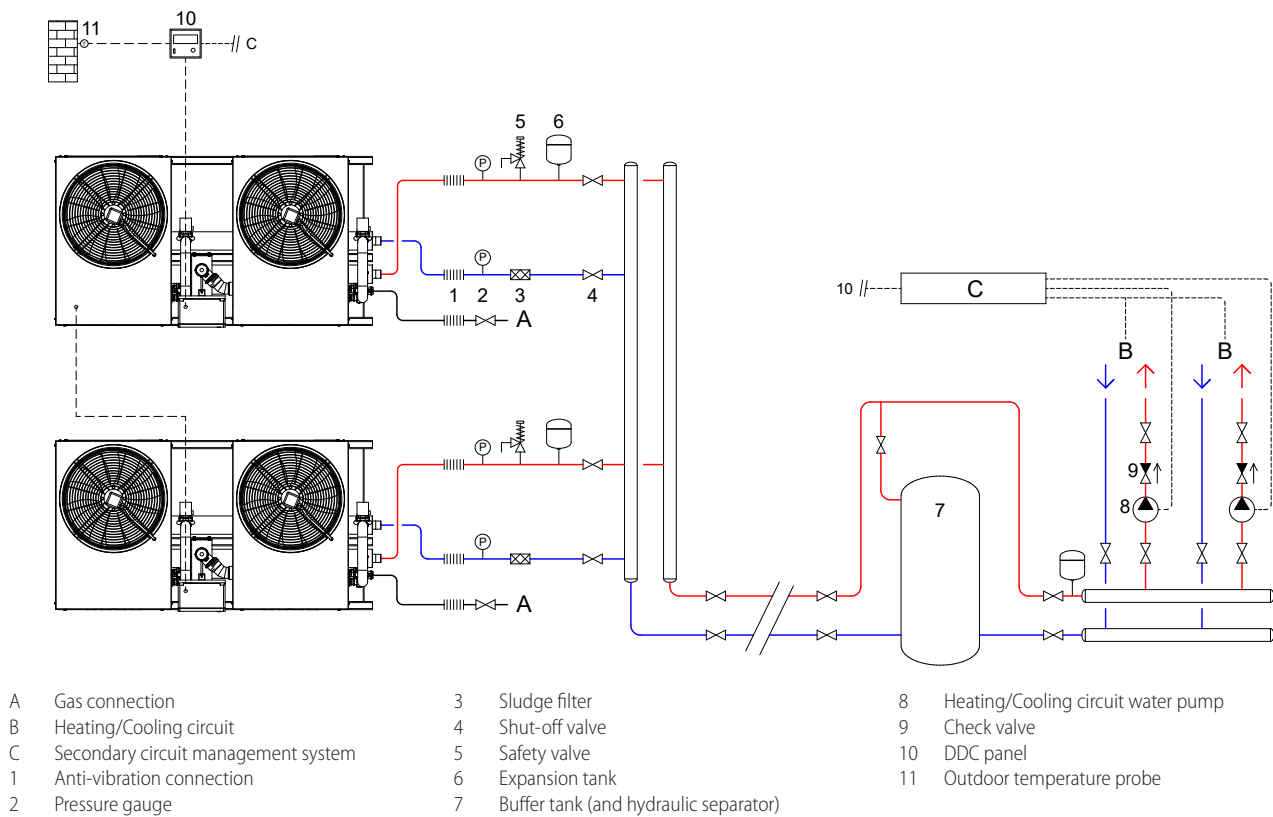

3.2.6.2 Hydraulic diagrams of Link without water pumps

This choice needs to be carefully considered in advance with Robur technical service. The common water pump is not supplied with the Link. Exam-

ples can be found in Figures 3.3 p. 27 and 3.4 p. 28.



The Link without water pumps are not available if at least one AY boiler is present.

Figure 3.3 Example of hydraulic system diagram for connection of 1 Link, 2-pipe, without water pumps


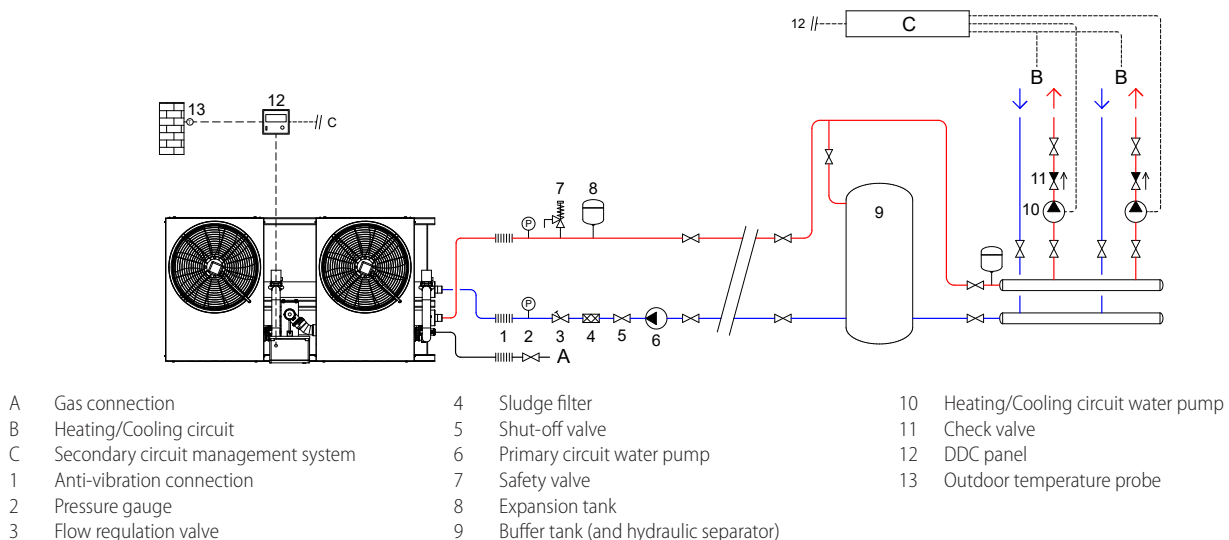


Figure 3.4 Example of hydraulic system diagram for connection of 2 Link, 2-pipe, without water pumps

3.2.7 Antifreeze function

The modules that make up the Link are equipped with an active antifreeze self-protection system to prevent freezing. The antifreeze function automatically starts the module's water pump, and if necessary, also its burner (for heat pumps and boilers only), when the outdoor temperature approaches zero or the temperature measured by the module's water temperature probes falls below a preset value. The antifreeze function is enabled by default for heating modules and deactivated for cooling modules.

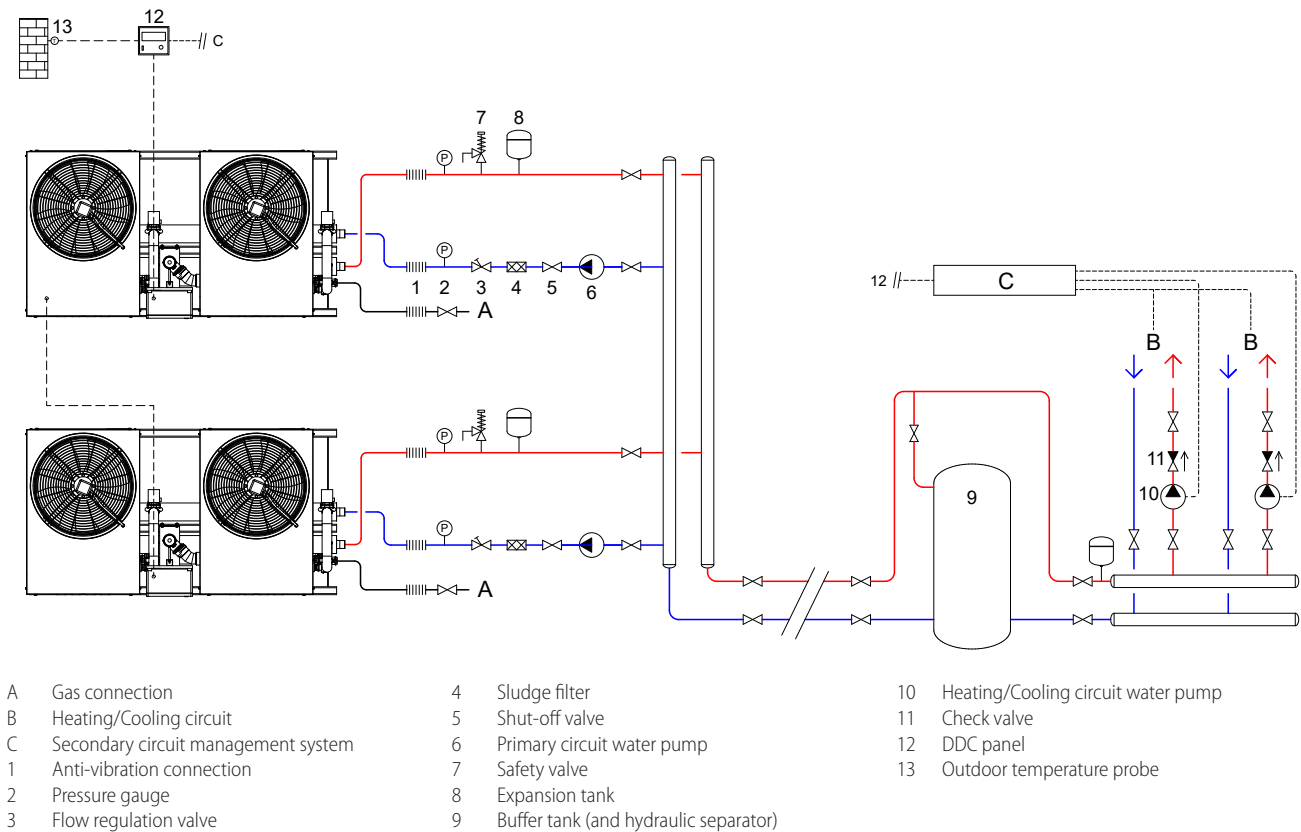

Electrical and gas continuity

The active antifreeze self-protection is only effective if the power and gas supplies are assured. Otherwise, antifreeze fluid might be required.



Secondary circuit

Arrange for appropriate measures to prevent water freezing in any secondary side circuits not used in winter (e.g. controlling, by timer or thermostat, the operation of the circulating pumps in that branch of the system).

3.2.8 Antifreeze fluid



Precautions with glycol

The manufacturer disclaims any liability for any damage caused by improper glycol use.

- Always check product suitability and its expiry date with the glycol supplier. Periodically check the product's preservation state.

- Do not use car-grade antifreeze fluid (without inhibitors), nor zinc-coated piping and fittings (incompatible with glycol).
- Glycol modifies water's physical properties (density, viscosity, specific heat, etc.). Size the piping, water pump and thermal generators accordingly.
- With automatic system water filling, a periodic check of the glycol content is required.



With high glycol percentage (> 20...30%)

If the glycol percentage is $\geq 30\%$ (for ethylene glycol) or $\geq 20\%$ (for propylene glycol) the TAC must be alerted before first start-up.



When producing DHW by DHW buffer tank, use propylene glycol only.



Please refer to the applicable local regulations for the choice of antifreeze fluid.

The use of toxic antifreeze fluids is forbidden.

3.2.8.1 Type of antifreeze glycol

Inhibited type glycol is recommended to prevent oxidation phenomena.

3.2.8.2 Glycol effects



Please refer to the specifications of the chosen glycol for the glycol percentage to be used and for the effects of glycol on appliance efficiency and pressure drops.



When using the antifreeze glycol available as a Robur op-

tional, the characteristics can be found in the Instruction sheet enclosed with the optional.

3.2.9 System water quality



Responsibility of the user/operator/installer

The installer, operator and user must assure system water quality (Table 3.2 p. 29). Failure to comply with the manufacturer's guidelines may affect operation, integrity and life of the appliance, voiding the warranty.

3.2.9.1 System water characteristics



In order to avoid any scale or deposits on the primary exchanger, the water in the system must be treated in accordance with the applicable standards. This treatment is absolutely essential in cases where there are frequent episodes of water supply or partial or total emptying of the system.

The filling and top-up water bring some calcium into the system. This calcium attaches to the hot parts, including the heat exchanger, thus creating pressure drops and thermal insulation on the active parts, which can lead to damage.

If the filling and top-up water of the system is outside the values indicated below, it must be softened and/or chemically treated. Additives may also be added to keep the calcium in solution. Hardness should be checked regularly and recorded on the system logbook.

The type of treatment chosen must be based on the characteristics of the water to be treated, the type of plant and the required purity limits.

Free chlorine or water hardness may damage the appliance.

Adhere to the chemical-physical parameters in Table 3.2 p. 29 and the regulations on water treatment for residential and industrial heating systems.

Table 3.2 Chemical and physical parameters of water

Chemical and physical parameters of water in heating/cooling systems		
Parameter	Measurement unit	Required value
pH	/	> 7 (1)
Chlorides	mg/l	< 125 (2)
Total hardness (CaCO ₃)	°f	< 15
	°d	< 8,4
Iron	mg/kg	< 0,5 (3)
Copper	mg/kg	< 0,1 (3)
Aluminium	mg/l	< 1
Langelier's index	/	0-0,4
Harmful substances		
Free chlorine	mg/l	< 0,2 (3)
Fluorides	mg/l	< 1
Sulphides		ABSENT

1 With aluminium or light alloys radiators, pH must also be lower than 8 (in compliance with applicable rules)

2 Value referred to the maximum water temperature of 80 °C

3 In compliance with applicable rules

3.2.9.2 Choice of treatment

The characteristics of the system water must comply with those detailed in Paragraph 3.2.9.1 p. 29.

The choice of a possible chemical conditioning system or the addition of plant water additives is subject to the designer, depending on the quality of water detected by qualified personnel. It must always be verified (through the technical office of the company producing the additive) that adding it to the plant water does not cause any such alterations to come out of the required parameters.



Chemical conditioning and washing

Water treatment/conditioning or system washing carried out carelessly may result in risks for the appliance, the system, the environment and health.

- Contact specialised firms or professionals for water treatment or system washing.
- Check compatibility of treatment or washing products with operating conditions.
- Do not use aggressive substances for stainless steel or copper.
- Do not leave washing residues.

3.2.9.3 Water topping up

The chemical-physical properties of the system's water may alter over time, resulting in poor operation or excessive topping up.

- Ensure there are no leaks in the installation.
- Periodically check the chemical-physical parameters of the water, particularly in case of automatic topping up.

3.2.10 System filling



How to fill up the system

After completing all water, electrical and gas connections:

1. Pressurise (at least 1,5 bar) and vent the hydraulic circuit.
2. In Link with water pumps, vent the water pumps through the vent valves in the body of the respective check valves (see procedure below).
3. Let water flow (with burners off). Please refer to the manual of the individual modules that make up the Link for the procedure.
4. Check and clean the filter(s) on the inlet pipe.
5. Repeat items 1, 2, 3 and 4 until the pressure has stabilised (at least 1,5 bar).



How to vent the GAHP/GA module water pumps (for Link with independent water pumps)

1. Turn off the system by means of provided control devices and wait for the water pumps to stop.
2. Remove the pump group protection cover (Figure 1.26 p. 20, details A and B).
3. Open the insulation (Figure 1.26 p. 20, detail C).
4. Close the isolation valve on the outlet of the Link and open the first vent valve (Figure 1.26 p. 20, detail E).
5. When the air is all out, replaced by a constant flow of water, close the first vent valve and open the shut-off valve on the outlet of the Link.
6. Close the isolation valve on the inlet of the Link and open the second vent valve (Figure 1.26 p. 20, detail F).
7. When the air is all out, replaced by a constant flow of water, close the second vent valve and open the shut-off valve on the inlet of the Link.
8. Reactivate the system and let water flow (with burners off). Please refer to the manual of the individual modules that make up the Link for the procedure.
9. If the air vent has been properly completed, close the insulation and reassemble the protective covers. If not, repeat the procedure from step 4.



How to vent the water pumps of the AY modules

1. Turn off the system by means of provided control devices and wait for the water pumps to stop.
2. Disassemble the front panel of the unit.
3. Close the isolation valve on the outlet of the Link and open the first vent valve (Figure 1.27 p. 21, detail B).

4. When the air is all out, replaced by a constant flow of water, close the first vent valve and open the shut-off valve on the outlet of the Link.
5. Close the isolation valve on the inlet of the Link and open the second vent valve (Figure 1.27 p. 21, detail C).
6. When the air is all out, replaced by a constant flow of water, close the second vent valve and open the shut-off valve on the inlet of the Link.
7. Reactivate the system and let water flow (with burners off). Please refer to the manual of the individual modules that make up the Link for the procedure.
8. If the air vent has been properly completed, reassemble the front panel of the module. If not, repeat the procedure from step 4.



The correct filling and air venting of the hydraulic system are fundamental to ensure reliability over time of the mechanical components, in particular the circulation pumps.

3.3 FUEL GAS SUPPLY

3.3.1 Gas connection

1 1/2" F on the right of the Link, at the bottom (Paragraph 1.4 p. 10).

It can be moved to the left side by moving the blind cap from the left to the right side.

- Install an anti-vibration connection between the Link and the gas piping.

3.3.2 Mandatory shut-off valve

- Provide a gas shut-off valve (manual) on the gas supply line, next to the Link, in a visible and easy accessible position, to exclude it when required.
- Perform connection in compliance with applicable regulations.

3.3.3 Gas pipes sizing

The gas pipes must not cause excessive pressure drops and, consequently, insufficient gas pressure to the modules of the Link.

3.3.4 Supply gas pressure



This appliance is equipped for a maximum gas supply pressure of 50 mbar.



Non compliant gas pressure may damage the appliance and be hazardous.



The appliance is suitable for the use of fuel gases of group H and/or group E and mixtures of natural gas and hydrogen up to 20% by volume.



Although it is normal for the inlet pressure to decrease during the operation of the appliance, it is important to check that there are no excessive fluctuations in the inlet pressure. In order to limit the extent of these variations, it is necessary to appropriately define the diameter of the gas inlet pipe to be adopted based on the length and pressure drop of the pipe itself, from the gas meter to the appliance.



If fluctuations in the gas distribution pressure happen, it is advisable to insert a special pressure stabiliser upstream of the gas inlet to the appliance. In case of LPG supply, all necessary precautions must be taken to avoid freezing of the combustible gas in case of very low external temperatures.

The gas supply pressure to the modules of the Link, both static and dynamic, must comply with Table 3.3 p. 30 with a tolerance of $\pm 15\%$.

Table 3.3 Network gas pressure

Product category	Country of destination	Gas supply pressure [mbar]							
		G20	G25	G25.1 (1) (2)	G25.3 (2)	G2.350 (2)	G27 (2)	G30	G31
II _{2H3B/P}	AL, BG, CH, CY, CZ, DK, EE, FI, GR, HR, IT, LT, MK, NO, RO, SE, SI, SK, TR	20						30	
	AT, CH	20						50	
II _{2H3P}	BG, CH, CZ, ES, GB, GR, HR, IE, IT, LT, MK, PT, SI, SK, TR	20							37
	RO	20							30
	AT	20							50
II _{2ELL3B/P}	DE	20	20					50	
II _{2ESi3P}	FR	20	25						37
II _{2Er3P}		20	25						37
II _{2HS3B/P}	HU	25		25				30	
II _{2E3P}	LU	20							50
II _{2EK3B/P}	NL	20			25			30	
II _{2E3B/P}	PL	20						37	
II _{2ELWL3B/P}		20				13	20	37	
II _{2ELWL3P}		20				13	20		37
I _{2E(R)}	BE	20							
I _{2E(S)}		20							
I _{3P}	BE								37
	IS								30
I _{2H}	LV	20							

The appliance gas supply pressure, both static and dynamic, must comply with the values in the Table, with a tolerance of $\pm 15\%$.

1 Gas not available for AY 35.

2 GA not approved for G25.1, G25.3, G2.350, G27 gases.

Product category	Country of destination	Gas supply pressure [mbar]							
		G20	G25	G25.1 (1) (2)	G25.3 (2)	G2.350 (2)	G27 (2)	G30	G31
I3B/P	MT, CY							30	
I3B								30	

The appliance gas supply pressure, both static and dynamic, must comply with the values in the Table, with a tolerance of $\pm 15\%$.

1 Gas not available for AY 35.

2 GA not approved for G25.1, G25.3, G2.350, G27 gases.

Before proceeding with the construction of the system, the installer must:

- Check that the gas used corresponds to that for which the appliance has been designed (see nameplate).
- Check that the flow rate of the gas meter is such as to ensure the simultaneous use of all the devices connected to it.



If it is necessary to change the type of gas supply to the appliance, contact the TAC that will make the necessary changes.



Under no circumstances shall the installer be authorised to carry out such operations.

3.3.5 Vertical pipes and condensate

- If needed, vertical gas pipes must be fitted with siphon and discharge of the condensate that may form inside the pipe.
- If needed, insulate the piping.

3.3.6 LPG pressure reducers

With LPG the following must be installed:

- A first stage pressure reducer, close to the liquid gas tank.
- A second stage pressure reducer, close to the appliance.

3.4 FLUE GAS EXHAUST



Compliance with standards

The modules that make up a Link are approved for connection to a flue gas exhaust for the types listed in their respective manuals.

3.4.1 Flue gas exhaust connection



The diameters (mm) of the connections, the residual head (Pa), the flow rate (kg/h), the temperature (°C) and other flue gas exhaust properties of the individual GAHP/AY modules making up the Link are indicated in their respective manuals.

Please also refer to the Abso Pro design manual for further information.

3.4.2 Flue gas exhaust kit

The individual GAHP/AY modules making up the Link are fitted as standard with a flue gas exhaust kit, to be installed by the installer (refer to the instructions in the manuals of the modules making up the Link).

3.4.3 Possible flue

If necessary, the Link can be connected to one or more flue(s).

- To size the flue(s) refer to the data and information in the GAHP/AY individual module manuals and to the Abso Pro design manual.
- GAHP/AY modules with different flue gas exhaust characteristics cannot be connected to the same flue, but must be

connected to different and separate flues.

- The GA modules have no flue gas exhaust.
- It is recommended to insulate the stainless steel flues of GAHP AR Plus modules.
- If several forced draft modules (GAHP A Plus, GAHP GS/WS Plus, GAHP AR Plus and AY) are connected to a single flue, it is obligatory to install a check valve on the exhaust of each. The check valve affects the appliance's operation and must therefore be selected appropriately to ensure correct and safe operation.
- The flues must be designed, sized, verified and realized by a qualified firm, with materials and components in accordance with regulations in force in the country of installation.
- Always provide the necessary sockets for smoke analysis in an accessible position.



In the case of indoor modules (GAHP GS/WS Plus indoor version), it is not allowed to connect several appliances to a single flue. Each module must have its own separate flue gas exhaust.



In case the check valves are installed outside, an appropriate UV ray protection must be assured (if the valve is in plastic) as well as protection from potential winter freezing of condensate backflow into the siphon.



To prevent corrosion phenomena, convey the acid condensate drain from GAHP AR Plus modules at the base of the flue gas exhaust duct.

3.5 FLUE GAS CONDENSATE DRAIN

Condensing modules (GAHP A Plus, GAHP GS/WS Plus, AY) produce condensate from combustion flue gases.

GAHP AR Plus modules produce condensate from the combustion flue gases only during the cold start-up transient.

The system must be designed in such a way as to prevent condensation from freezing. Before commissioning the appliance, check that the condensate is drained correctly.



Condensate acidity and exhaust regulations

The condensate contains aggressive acid substances. Refer to applicable regulations in force for condensate exhaust and disposal.

If required, install an acidity neutraliser of adequate capacity.



Do not use gutters to discharge the condensate

Do not discharge the condensate in gutters, due to the risk of materials corrosion and ice formation.

3.5.1 Flue gas condensate connection

If two or more condensing modules (GAHP A Plus, GAHP GS/WS Plus, AY) are included in the Link, the Link is equipped with a flue

gas condensate manifold.

The connection for flue gas condensate drain is located on the right side of the Link (Paragraph 1.4 p. 10).

The connection of the discharge to the sewerage system must be made at atmospheric pressure, i.e. by dripping into a siphoned container connected to the sewerage system.



The condensate drain cap can not be moved on the opposite side as the condensate manifold is sloping towards the right side.

3.5.2 Flue gas condensate drain manifold

To make the condensate drain manifold:

- ▶ Size the ducts for the maximum condensate flow rate, equal to the sum of the condensate flow rates of the individual GAHP/AY modules, and in any case with a diameter not less than 15 mm.
- ▶ Use plastic materials resistant to acidity pH 3-5.
- ▶ Provide a minimum slope of 1%, i.e. 1 cm for each metre of length (otherwise a booster pump is required).
- ▶ Prevent freezing.
- ▶ Dilute, if possible, with domestic waste water (bathrooms, washing machines, dish washers...), basic and neutralising.

3.5.3 Condensate drain siphon filling

During the first start-up, the condensate siphon of the AY modules must be filled to prevent the combustion gases from back-flowing through the siphon.

For GAHP GS/WS Plus indoor modules, Robur uses condensate collection siphons with float, which blocks the passage of flue gases and odours deriving therefrom in case the appliance remains turned off for a long time and the liquid contained in the siphon evaporates or in case of the first start-up.

Thanks to this system, for GAHP GS/WS Plus indoor modules, it is

not necessary to fill the siphon during the first start-up.

It is advisable, after the first few months of operation of the appliance, to clean the siphon, which collects also any deposits resulting from the first passage of the condensate inside the components of the appliance. These deposits could cause the siphon itself to malfunction.

3.6 DEFROSTING WATER DRAINAGE



Aerothermal appliances defrosting

In winter, in the aerothermal Link with GAHP A Plus/ GAHP AR Plus modules, frost may form on the finned coils, and the modules perform defrosting cycles.

3.6.1 Collection basin and drainage system

Provide for a collection basin or containment rim and a discharge system of the defrosting water, to avoid overflowing, freezing and damage.

3.7 SAFETY VALVE DRAIN

In the case of indoor installation (only for Link of GAHP GS/WS in the indoor version), the safety valve drain of the sealed circuit must be ducted to the outside, proceeding as described in the relevant Paragraph of the manuals supplied with the individual modules.



The safety valve drain must be mandatorily ducted outside. Failure to comply with this provision jeopardizes first start-up.



Do not install any shut off device on the drain duct between the safety valve and the outside vent.

4 ELECTRICAL INSTALLER

4.1 WARNINGS



Read the warnings in Chapter III p. 4, providing important information on regulations and on safety.



Compliance with installation standards

Installation must comply with applicable regulations in force, based on the installation Country and site, in matters of safety, design, implementation and maintenance of electrical systems.



Installation must also comply with the manufacturer's provisions.



Live components

After placing the appliance in the final position, and prior to making electrical connections, ensure not to work on live components.



Earthing

- The appliance must be connected to an effective earthing system, installed in compliance with regulations in force.
- It is forbidden to use gas pipes as earthing.



Cable segregation

Keep power cables physically separate from signal ones.



Do not use the power supply switch to turn the appliance on/off

- Never use the external isolation switch to turn the appliance on and off, since it may be damaged in the long run (occasional blackouts are tolerated).
- To turn the appliance on and off, exclusively use the appropriate control device provided.



Control of water pump

In the case of Links without circulators:

- The common hydraulic/primary circuit water pump must be controlled by the electrical panel of the appliance (terminals KK, PP, 12, Figure 4.1 p. 33).
- Water pump start/stop is not allowed without the re-

quest of the appliance.

4.2 ELECTRICAL SYSTEMS

Electrical connections must provide:

- power supply (Paragraph 4.3 p. 33)
- control system (Paragraph 4.4 p. 34)
- water pumps (Paragraph 4.5 p. 38)



How to make connections

All electrical connections must be made in the Link electrical panel (Figures 1.29 p. 22 and 4.1 p. 33):


1. Ensure that the Link electrical panel is not live.

2. Open the electric panel with the appropriate key and remove the lower blind panel to access the terminal blocks.
3. Insert the wires through the suitable holes.
4. Make the connections.
5. Made the connections, reposition the blind panel and reclose the electrical panel.



Up to 6 GAHP/GA/AY modules on the Link there is only one electrical panel. In there are more than 6 GAHP/GA/AY modules on the Link there are two electrical panels, of which the main one (the one in which the electrical connections for power supply and control are to be made) is the one on the left, while the one on the right is dedicated to the AY boilers.

Figure 4.1 Blind panel: detail of internal terminal blocks on DIN rail

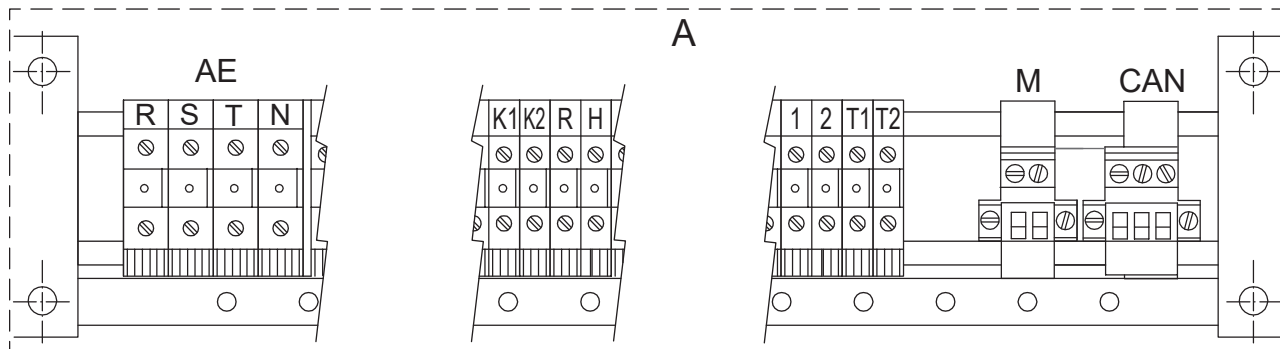

A Blind panel of the Link electrical panel (Figure 1.29 p. 22)

AE Power supply input terminals

K1-K2 24 V coil terminals for water pump request (heating/cooling circuit side)

R-H Condensate heating resistor terminals

1-2 24 V coil terminals for water pump request (HR recovery circuit side)

T1-T2 DHW buffer tank thermostat terminals (HR recovery circuit side)

M 2-pole 24 Vac connector for service use

CAN 3-pole connector for CAN bus network connection

4.3 ELECTRICAL POWER SUPPLY



Electrical protection

The installer must provide a four-pole (three-phase) disconnect GS (Figure 4.2 p. 34) or a two-pole (single phase) GS disconnect (Figure 4.3 p. 34), in the external electrical power supply panel, with suitable fuses on the phases and a minimum contact opening of 3 mm. The installation of a fuse on the neutral is not allowed. Indirect contact protection by means of differential switch and overload must be guaranteed by means of a sufficiently dimensioned automatic switch or fuse.



Do not modify the electric panel of the Link, nor add any components inside it (relays, ...).

Provide a protected line (by the installer), which may be:

- three-phase 400 V 3N - 50 Hz (Figure 4.2 p. 34)
- or as an alternative,
- single-phase 230 V 1N - 50 Hz (Figure 4.3 p. 34)



How to connect the power supply

To connect the multipole power cable (Figures 4.2 p. 34 and 4.3 p. 34):

1. Access the terminal blocks in the electrical panel of the Link (Paragraph 4.2 p. 33).
2. Locate the "AE" terminal block; with the "R-S-T-N"


terminals.

3. Connect the wires (five/three-phase or three/single-phase), providing the longest for the grounding (last to break in case of accidental traction), to R-S-T-N terminals for three-phase 400 V 3N - 50 Hz, Figure 4.2 p. 34, or to (RST)-N terminals (phase L connected to all R, S, T terminals) for single phase 230 V 1N - 50 Hz, Figure 4.3 p. 34.
4. Made the connections, reposition the blind panel and reclose the electrical panel.




A cabling error, as well as affecting the operation, could also damage the electrical components of the Link. In particular, in case of three-phase power supply, be sure not to connect one of the phases to terminal N.

Figure 4.2 Three phase power supply electrical connection 400 V 3N - 50 Hz

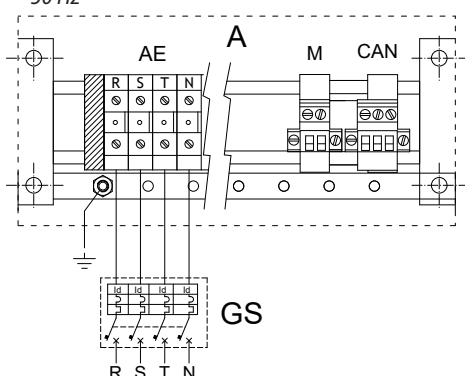

- A Blind panel of the Link electrical panel (Figure 1.29 p. 22)
 AE Power supply input terminals
 GS Three-phase magnetothermic switch
 RST Phases
 N Neutral

Figure 4.3 Single phase power supply electrical connection 230 V 1N - 50 Hz

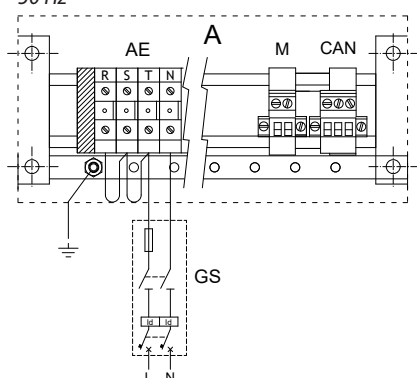

- A Blind panel of the Link electrical panel (Figure 1.29 p. 22)
 AE Power supply input terminals
 GS Bipolar disconnector with suitable fuse and minimum contact opening of 3 mm
 L Phase
 N Neutral

Table 4.1 CAN bus cable types

Cable name	Signals / Color			Maximum length	Note
Robur					Optional code OCVO008
ROBUR NETBUS	H = BLACK	L = WHITE	GND = BROWN	450 m	
Honeywell SDS 1620					In all cases the fourth conductor should not be used
BELDEN 3086A	H = BLACK	L = WHITE	GND = BROWN	450 m	
TURCK type 530					
DeviceNet Mid Cable					
TURCK type 5711	H = BLUE	L = WHITE	GND = BLACK	450 m	
Honeywell SDS 2022					
TURCK type 531	H = BLACK	L = WHITE	GND = BROWN	200 m	



How to connect the CAN bus cable to the Link

To connect the CAN bus cable to the electrical panel of the Link, hence to the pre-wired boards of the modules that make it up (Figure 4.4 p. 35):

1. Access the terminal blocks in the electrical panel of the Link (Paragraph 4.2 p. 33).
2. Locate the "CAN" terminal block with the "GND-L-H" terminals.
3. Connect the CAN bus cable to the GND (shielding/earth-

4.4 ADJUSTMENT AND CONTROL



Switching for reversible appliances

Avoid frequently switching between heating and cooling modes for reversible appliances.

4.4.1 Control systems

Two separate adjustment systems are provided, each with specific features, components and diagrams:

1. DDC control panel (with CAN bus connection).
2. CCI control (with CAN bus connection).

If there is at least one ACF60-00 HR module on the Link, it is possible to utilise the recovery heat output by activating the request via terminals T1-T2 (Paragraph 4.4.6 p. 37).

4.4.2 CAN bus communication network

The CAN bus communication network, built using the signal cable of the same name, allows one or more Robur appliances to connect and be controlled remotely using the DDC or CCI control panels.

It entails a certain number of serial nodes, distinguished in:

- intermediate nodes, in variable number
- terminal nodes, always and only two (beginning and end)

Each component of the Robur system, appliance (GAHP, GA, AY,...) or control device (DDC, RB100, RB200,...), corresponds to a node, connected to two more elements (if it is an intermediate node) or to just one other element (if it is a terminal node) through two/one CAN bus cable section/s, forming an open linear communication network (never star- or loop-shaped).

4.4.3 CAN bus signal cable

The CAN bus connections between the boards of the individual GAHP/GA/AY modules that make up the individual Link are already factory-made.

The DDC or CCI control panels are connected to the Link using a shielded CAN bus cable in accordance with Table 4.1 p. 34 (types and maximum permitted distances).

For lengths ≤ 200 m and up to 4 nodes (e.g. 1 DDC + 3 GAHP), a simple 3x0,75 mm² shielded cable may also be used.

ing) + L and H terminals (two signal wires).


4. Block the cable with the earthing terminal located behind the DIN bar, ensuring a good electrical contact is made with the shielding braid and the bare conductor (if any); see detail in Figure 4.4 p. 35.
5. Position the J1 jumpers of the board of the last GAHP/GA module on the left of the Link closed if the node is terminal (case of one Link only) or open if the node is intermediate (case of several Links in the same system), Figure 4.9 p. 37.

6. In the case of AY boiler-only Link, place jumper J11 of the CAN-NDG board of the last module on the left of the Link closed if the node is terminal (case of one Link only) or open if the node is intermediate (case of more than one Link on the same system), Figure 4.6 p. 36. Take care in the case of AY 100 (which has two thermal modules inside) to always operate on internal module 2 (left) as the

internal CAN connection between module 1 and module 2 is already factory-made and must not be changed.

7. Connect the DDC or CCI control panel (and, if applicable, the RB100 or RB200 devices) to the CAN bus cable according to the instructions in the relevant manuals.
8. Made the connections, reposition the blind panel and reclose the electrical panel.

Figure 4.4 CAN bus cable connection between 1 DDC/CCI and the Link electrical panel

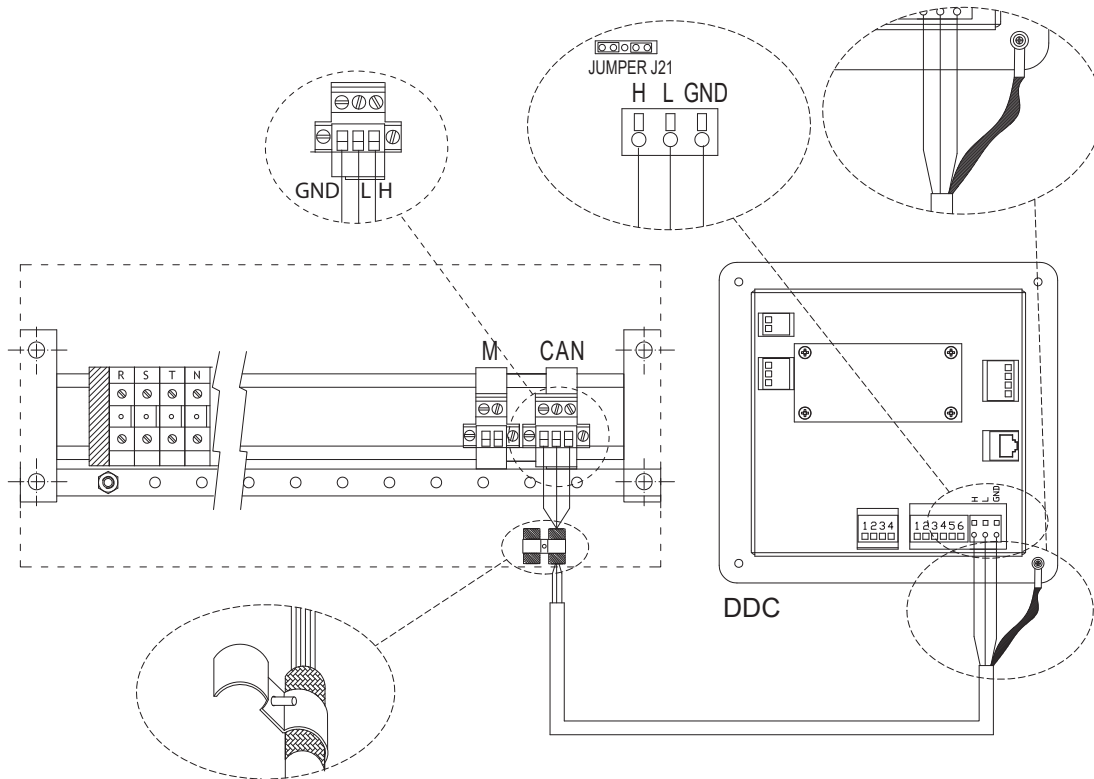


CAN 3-pole connector for CAN bus network connection

DDC CCI/DDC (rear view)

CAN bus connection to GAHP/GA modules

Place the J1 Jumpers of the electronic board of the GAHP/GA module **CLOSED** (detail A) if the node is terminal (one connected CAN bus cable section only), or **OPEN** (detail B) if the node is intermediate (two connected CAN bus cable sections).

Figure 4.5 Connection of the CAN bus cable to the electronic board (GAHP/GA/IF ACF)

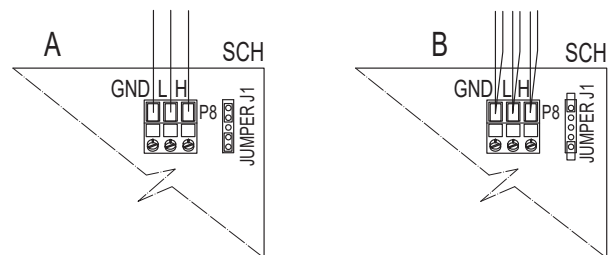

SCH GAHP/GA/IF ACF electronic board

GND Common data

L Data signal LOW

H Data signal HIGH

J1 Onboard CAN bus jumper

A Detail of "terminal node" case (3 wires; J1 = jumper "closed")

B Detail of "intermediate node" case (6 wires; J1 = jumper "open")


P8 CAN port/connector

CAN bus connection to AY modules

Place the J11 jumpers of the CAN-NDG electronic board of the AY appliance **CLOSED** (detail A) if the node is terminal (one connected CAN bus cable section only), or **OPEN** (detail B) if the node is intermediate (two connect-

ed CAN bus cable sections).

Figure 4.6 Connection of the CAN bus cable to the CAN-NDG electronic board

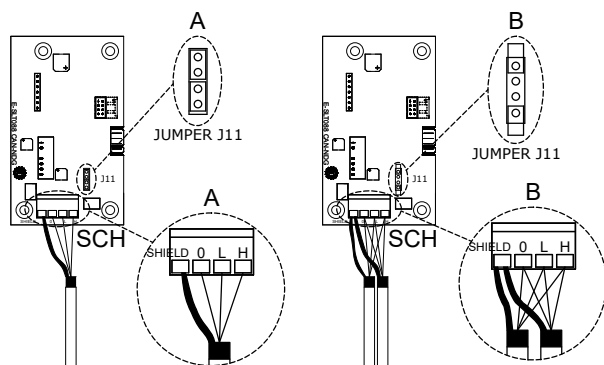

SCH CAN-NDG electronic board for AY appliance

0 Common data

L Data signal LOW

H Data signal HIGH


J11 CAN bus jumper on CAN-NDG board

A Detail of "terminal node" case (3 wires; J11 = jumper "closed")

B Detail of "intermediate node" case (6 wires; J11 = jumper "open")

A) if the node is terminal (one connected CAN bus cable section only), or OPEN (detail B) if the node is intermediate (two connected CAN bus cable sections).

Figure 4.7 Connection of the CAN bus cable to the control panel

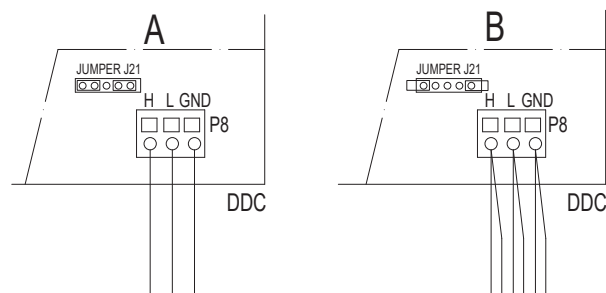

DDC DDC control panel

GND Common data

L Data signal LOW

H Data signal HIGH

J21 CAN bus jumper on DDC board

A Detail of "terminal node" case (3 wires; J21 = jumper "closed")

B Detail of "intermediate node" case (6 wires; J21 = jumper "open")

P8 CAN port/connector




CAN bus connection to the control panel

Place the J21 jumpers of the control panel CLOSED (detail

4.4.4 1 Link + DDC/CCI configuration

Refer to Figure 4.4 p. 35 for the connection diagram of the CAN bus cable.

Figure 4.8 CAN bus connection for systems with a single Link

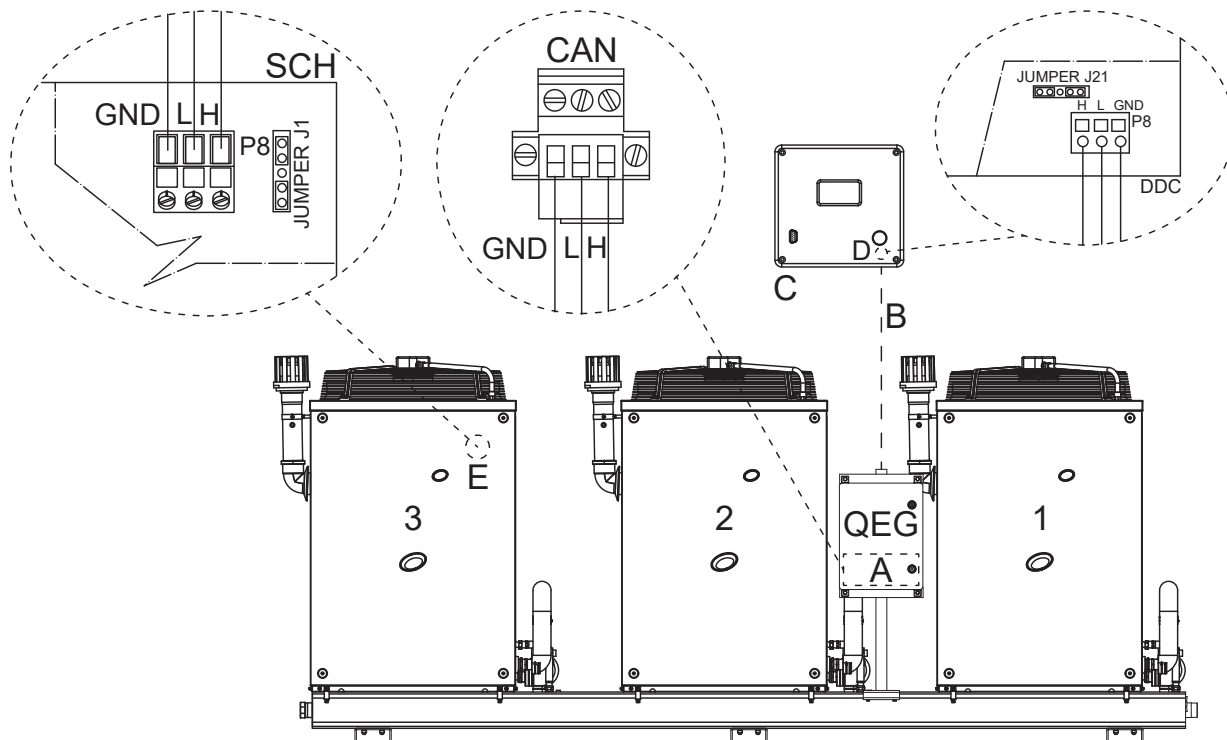

A Blind panel of the Link electrical panel (Figure 1.29 p. 22)

B CAN bus cable (not supplied, Table 4.1 p. 34)

C DDC/CCI control panel

D Terminal node connection on DDC/CCI (Figure 4.7 p. 36, case A)

E Pre-wired terminal node on the last module of the Link (Figure 4.5 p. 35, case A)

QEG Link electrical panel


3 Last module of Link (with "ID00")

4.4.5 2 Link + DDC configuration

The DDC control panel is connected to the first Link as a terminal node (connection diagram in Figure 4.4 p. 35).

In the last module of the first Link (which must be connected to the electrical panel of the next Link), jumpers J1 must be arranged open, as shown in detail B of Figure 4.5 p. 35.

Figure 4.9 Example of a 7-node CAN bus network (1 DDC + 2 Link connected to the same water circuit)

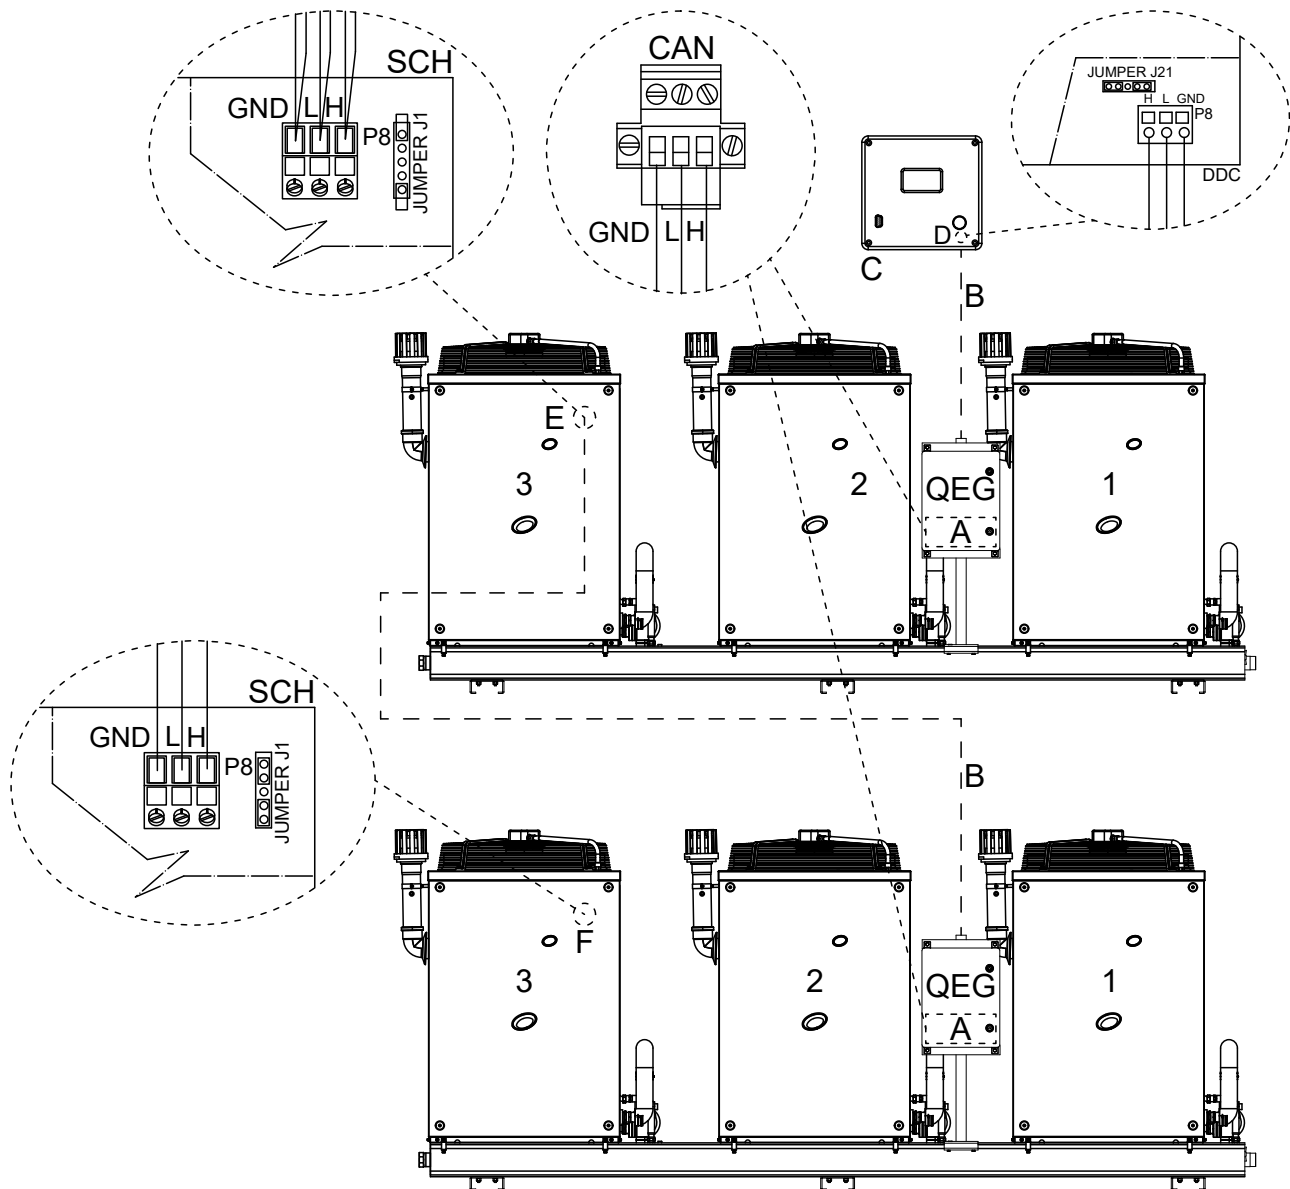

- | | | | |
|---|-----------------------------------------------------------------------------|-----|-----------------------------------------------------------------------------------|
| A | Blind panel of the Link electrical panel (Figure 1.29 p. 22) | F | Pre-wired terminal node on the last module of the Link (Figure 4.5 p. 35, case A) |
| B | CAN bus cable (not supplied, Table 4.1 p. 34) | QEG | Link electrical panel |
| C | DDC panel | 3 | Last module of Link (with "ID00") |
| D | Terminal node connection on DDC control panel (Figure 4.7 p. 36, case A) | | |
| E | Intermediate node on the last module of the Link (Figure 4.5 p. 35, case B) | | |

4.4.6 Recovery circuit activation request (Link with HR)


To activate the request for recovery heat output (only available if at least one ACF60-00 HR module is present on the Link), it is necessary to connect the contact from a suitable thermostat with adjustable differential placed on the utility for which the recovery is intended (e.g. DHW buffer tank) to terminals T1-T2 of the Link electrical panel.



The recovery heat output (and thus the activation of the relevant water pump) will only be available when the ACF60-00 HR chiller-heater is actually active for cooling service. It is not possible to activate the ACF60-00 HR

chiller-heater due to the request for recovery heat output.

Figure 4.10 Connection of DHW thermostat for heat recovery circuit activation (Link with HR)

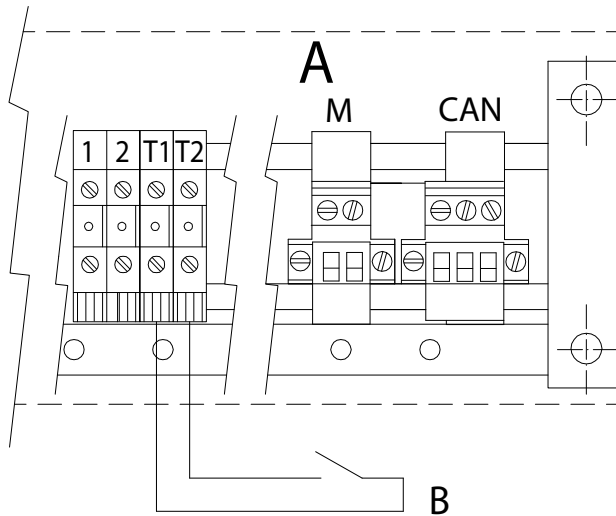

- A Blind panel of the Link electrical panel (Figure 1.29 p. 22)
 B DHW thermostat with adjustable differential for heat recovery circuit activation
 T1-T2 DHW buffer tank thermostat terminals (HR recovery circuit side)

4.5 WATER CIRCULATION PUMPS

In Link with water pumps, the individual independent water pumps (1 or 2 for each GAHP/GA/AY module) are already mounted and pre-wired on board the Link.

In Link without water pumps, electrical connections must be made (both for power supply and control) of the common water pump of the primary water circuit, as shown in the diagrams in Figures 4.11 p. 39, 4.12 p. 40.

4.5.1 Common water pump of a Link without water pumps




How to connect the common circulation pump

To connect the common circulation pump (single-phase or three-phase) of a Link without any circulating pumps fitted on (Figure 4.11 p. 39 or 4.12 p. 40):

1. Access the terminal blocks in the electrical panel of the Link (Paragraph 4.2 p. 33).
2. Connect the two wires of the common water pump request to the appropriate terminals K1-K2 or 1-2.
3. Made the connections, reposition the blind panel and reclose the electrical panel.

Figure 4.11 Connection of single- or three-phase water pump directly controlled by the Link (configurations "without water pumps")

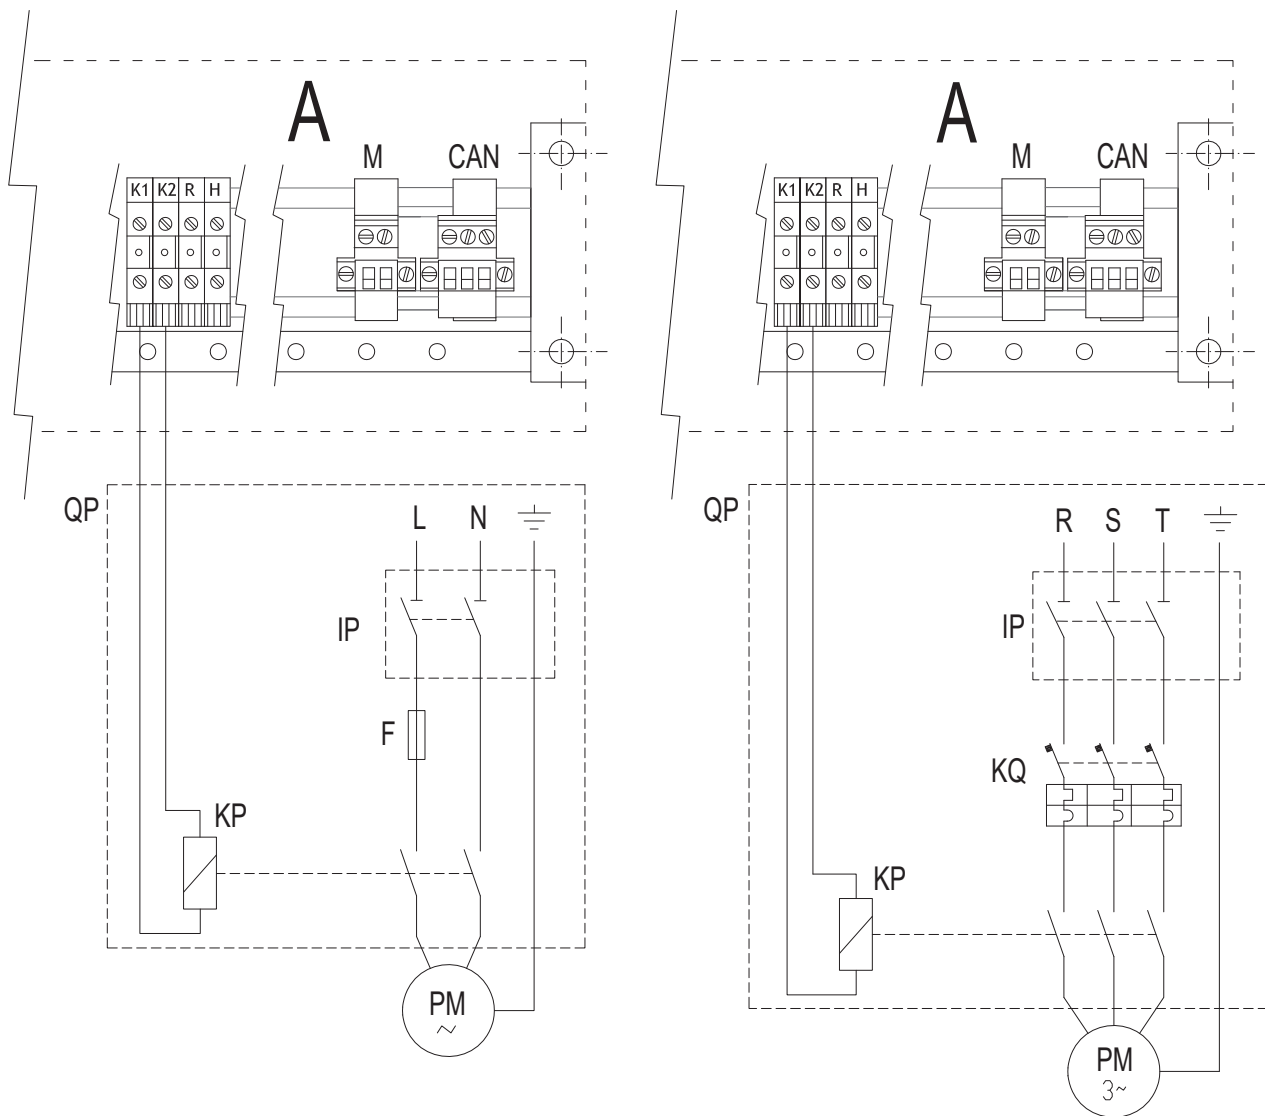


- A Blind panel of the Link electrical panel (Figure 1.29 p. 22)
- F Appropriate fuse for protecting the water pump used
- IP Water pump disconnecter (not supplied)
- K1-K224 Vac coil terminals for the common water pump request of the hot/cold circuit of the Link
- KP NO relay for controlling the water pump (not supplied)

- KQ Appropriate motor protection switch for the water pump used
- L Phase of single-phase water pump power supply
- N Neutral
- PM Primary system water pump (not supplied)
- QP Water pump electrical panel (external)
- RST Three-phase water pump power supply phases

The terminals for the request of the common water pump of the heat recovery circuit, described in Figure 4.12 p. 40 below, are only present if at least one ACF60-00 HR module is present on the Link.

Figure 4.12 Heat recovery circuit: connection of single- or three-phase water pump directly controlled by the Link (configurations "without water pumps")

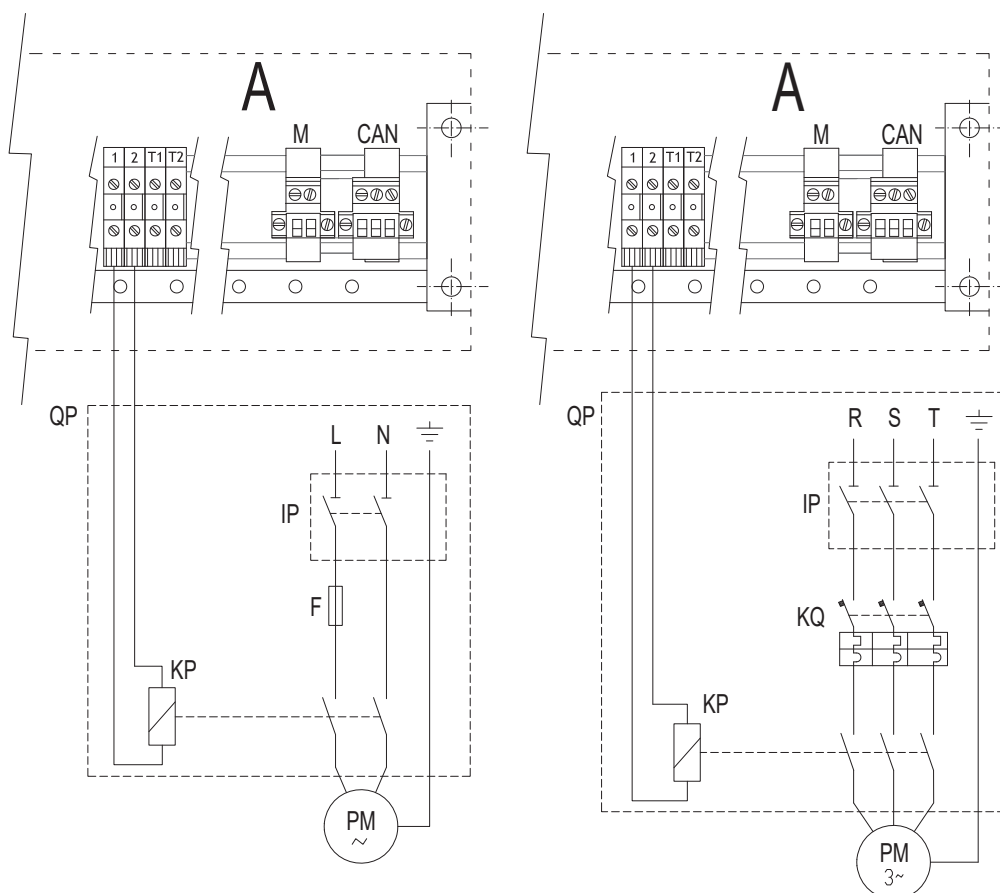

- A Blind panel of the Link electrical panel (Figure 1.29 p. 22)
 1-2 24 Vac coil terminals for the common water pump request of the heat recovery circuit of Link with HR
 F Appropriate fuse for protecting the water pump used
 IP Water pump disconnector (not supplied)
 KP NO relay for controlling the water pump (not supplied)

- KQ Appropriate motor protection switch for the water pump used
 L Phase of single-phase water pump power supply
 N Neutral
 PM Primary system water pump (not supplied)
 QP Water pump electrical panel (external)
 RST Three-phase water pump power supply phases

5 FIRST START-UP

i First start-up entails checking/setting up the combustion parameters and may exclusively be carried out by a Robur TAC. NEITHER the user NOR the installation technician is authorised to perform such operations, under penalty of voiding the warranty.

5.1 PRELIMINARY CHECKS

5.1.1 Preliminary checks for first start-up

Upon completing installation, before contacting the TAC the installer must check:

- ▶ Water, electrical and gas systems suitable for the required capacities and equipped with all safety and control devices required by the regulations in force.
- ▶ Absence of leaks in the water and gas systems.
- ▶ Type of gas for which the Link is designed.
- ▶ Supply gas pressure complying with the values of Table 3.3 p. 30, with max tolerance $\pm 15\%$.
- ▶ Correct operation of the flue exhaust duct.

- ▶ Power supply mains complying with the appliance's rating plate data.
- ▶ Appliance correctly installed, according to the manufacturer's provisions.
- ▶ System installed in a workmanlike manner, according to national and local regulations.

5.1.2 Abnormal or hazardous installation situations

Should any abnormal or hazardous installation situations be found, the TAC shall not perform first start-up and the appliance shall not be commissioned.

These situations may be:

- ▶ Outdoor aérothermal Link installed within a room.
- ▶ Appliance installed indoors without safety valve drain ducting (only for GAHP GS/WS Plus indoor version).
- ▶ Appliance installations other than type C (only for GAHP GS/WS Plus indoor version).
- ▶ Other gas appliances, not type C, in the installation room (only for GAHP GS/WS Plus indoor version).
- ▶ Failed compliance with minimum clearances.
- ▶ Insufficient distance from combustible or flammable mate-

rials.

- Conditions that do not warrant access and maintenance in safety.
- Appliance switched on/off with the main switch, instead of the provided control device.
- Appliance defects or faults caused during transport or installation.
- Gas smell.
- Non-compliant mains gas pressure.
- Non-compliant flue gas exhaust.
- All situations that may involve operation abnormalities or are potentially hazardous.

5.1.3 Non-compliant system and corrective actions

Should the TAC find any non conformities, the user/installer is bound to perform any corrective procedures required by the TAC.

After performing the remedial actions (the installer's responsibility), if the TAC deems that safety and conformity conditions are in place, first start-up may be effected.

5.2 ELECTRONIC ADJUSTMENT ON THE APPLIANCE – MENUS AND PARAMETERS

5.2.1 Electronic boards on the appliances



For instructions on the on-board electronic boards of the individual GAHP/GA/AY modules that make up the Link, please refer to their respective manuals.

5.2.2 DDC or CCI control panel



For information on the DDC or CCI control panel, please refer to the relevant manual.

5.3 MODIFYING SETTINGS



To change the settings of the Link use the provided control device. Please refer to the manual of the device for instructions.

6 NORMAL OPERATION



This section is for the end user.



The use of the appliance by the end user is only allowed after the authorised Robur TAC has completed the first start-up.

6.1 WARNINGS



Prior to using the appliance carefully read the warnings in Chapter III.1 p. 4, providing important information on regulations and on safety.



First startup by TAC

First start-up may exclusively be carried out by a Robur TAC (Chapter 5 p. 40).



Never power the appliance off while it is running

NEVER power the appliance off while it is running (except in the event of danger, Chapter III.1 p. 4), since the appliance or system might be damaged.

If Robur control devices are used to switch on and control the appliance, please refer to the manuals supplied with them for setting operations.

It is important to specify the operating and control requirements of the system as clearly as possible during the first start-up phase, as this allows the Robur TAC to set the adjustment and control systems correctly (if they are in turn provided by Robur), and consequently normal operation will only require minimal changes to the settings already made, drastically reducing the possibility of incorrect settings compromising the efficient operation of the appliance.

6.2 SWITCH ON AND OFF



Routine switching on/off

The appliance may exclusively be switched on/off by means of the appropriate control device provided.



Do not switch on/off with the power supply switch

Do not switch the appliance on/off with the power supply switch. This may be harmful and dangerous for the appliance and for the system.



Checks before switching on

Before switching on the appliance, ensure that:

- gas valve open
- appliance electrical power supply (main switch ON)
- power supply to the DDC or CCI control panel (if any)
- water circuit filled and at the correct pressure

6.2.1 How to switch on/off



To turn on/off the Link see the manual of the appropriate control device provided.

Once switched on with the control device, under normal operating conditions, the Link modules automatically start/stop according to the heating and/or cooling requirements and the logic defined in the control device, providing hot/chilled water at the programmed temperature.



The Link modules are not necessarily activated immediately, but will only start when there are actual service requests.

6.3 MODIFYING SETTINGS



To change the settings of the Link use the provided control device. Please refer to the manual of the device for instructions.



Do not modify complex settings

Specific technical and system knowledge is required for complex settings. Contact a TAC.

6.4 EFFICIENCY

For greater appliance efficiency:

- ▶ Keep the finned coil of the aerothermal appliances clean.
- ▶ Set water temperature to the actual system requirement.
- ▶ Reduce repeated switch-ons to the minimum (low loads).
- ▶ Program appliance activation for actual periods of use.
- ▶ Keep water and air filters on plumbing and ventilation systems clean.
- ▶ For Link without independent water pumps that are made up of mixed modules, remember to close the isolation valves on the GA modules during the heating operation of the system.

7 MAINTENANCE

7.1 WARNINGS



Correct maintenance prevents problems, assures efficiency and keeps running costs low.



Maintenance operations described herein may exclusively be performed by the TAC or skilled maintenance technician.



Any operation on the internal components of the GAHP/GA/AY modules that make up the Link may only be performed by the TAC.



Before performing any operation, switch off the appliance by means of the control device and wait for the end of the shutdown cycle of all the modules, then disconnect the gas supply, by closing the gas valve. Finally, disconnect the electrical power supply as described in Paragraph 7.1.1.2 p. 42.



The efficiency checks and every other "check and maintenance operation" (Paragraph 7.2 p. 42 and 7.3 p. 43) must be performed with a frequency according to current regulations or, if more restrictive, according to the provisions set forth by the manufacturer, installer or TAC.



Responsibility for efficiency checks, to be carried out for the aims of restricting energy consumption, lies with the system manager.



Environmental or operational heavy conditions

7.2 PRE-EMPTIVE MAINTENANCE

For pre-emptive maintenance, comply with the recommendations in Table 7.1 p. 43.

Increase the frequency of appliance maintenance and cleaning operations in especially heavy-duty environmental or use conditions (e.g., intensive use of the equipment, brackish environment, etc.).

7.1.1 Link electrical connection and disconnection operations

7.1.1.1 Electrical connection

The electrical connection must take place by doing the following sequence of operations:

1. Close any switches/disconnectors located upstream of the three-phase supply line of the Link.
2. Close the 4-pole switch in the electrical panel of the Link.
3. One at a time, close each module's single-phase (magnetothermal) breakers, located in the electrical panel of the Link.



In the case of first start-up, replace step 3 with the following steps:

1. (3 ') Close **ONLY ONE** of the modules' single-phase automatic (magnetothermal) breakers, located in the general electrical panel of the Link, and check that the corresponding module is energized. Otherwise, investigate and solve the problem before proceeding to the next step.
2. (4') Close the remaining single-phase automatic breakers of the modules.

7.1.1.2 Electrical disconnection

The electrical disconnection must take place by doing the following sequence of operations:

1. Open the single-phase automatic (magnetothermal) breakers of each module, located in the electrical panel of the Link.
2. Open the 4-pole switch in the electrical panel of the Link.
3. If required, open any switches/disconnectors located upstream of the three-phase supply line of the Link.

Table 7.1 Guidelines for the GAHP/GA preventive maintenance operations

		GAHP A Plus	GAHP AR Plus	GAHP GS/WS Plus	GA ACF
Guidelines for the preventive maintenance operations					
Appliance check	visual check of the general condition of the appliance and its finned coil	√ (1)	√ (1)	-	√ (1)
	check the correct operation of the device used for monitoring the water flow	√	√	√	√
	check the % value of CO ₂	√	√	√	-
	check gas pressure to the burners	-	-	-	√
	check that the condensate drain is clean (If necessary, frequency of the maintenance operation must be increased)	√	-	√	-
	replace the belts after 6 years or 12000 hours of operation	√	√	√	√
	replace the oil pump motor condenser every 3 years or every 10000 operating hours or whenever the condenser capacity is less than 95% of the nominal value	√	√	√	√
Check for every DDC or CCI	check that the plant is able to achieve the setpoint temperature	√	√	√	√
	download the event history	√	√	√	√

(1) We recommend cleaning the finned coil every 4 years (in any case, the frequency of cleaning is strongly affected by the installation site). Avoid cleaning the finned coil too aggressively, taking care not to bend the fins during cleaning.

7.3 SCHEDULED ROUTINE MAINTENANCE

7.3.1 GAHP/GA

Table 7.2 p. 43, at least once every 2 years.

For scheduled routine maintenance, perform the operations in

Table 7.2 GAHP/GA scheduled routine maintenance

		GAHP A Plus	GAHP AR Plus	GAHP GS/WS Plus	GA ACF
Ordinary scheduled maintenance					
Appliance check	clean the combustion chamber	√ (1)	√ (1)	√ (1)	√
	clean the burner	√ (1)	√ (1)	√ (1)	√
	clean the ignition and flame sensor electrodes	√	√	√	√
	check that the condensate drain is clean	√	-	√	-

(1) Only in case the analysis of combustion products is non-compliant.

7.3.2 AY

It is recommended that the following operations and checks be carried out each year:

- Combustion circuit functionality and heat exchange control:
 - Burner and flue exhaust duct inspection
 - Cleaning of burner and water/flue exchanger (if applicable)
 - Flame ignition/detection system control
- Hydraulic circuit and internal components functionality check:
 - Hydraulic circuit control (pipes, gaskets)
 - Expansion tank
 - Control and safety devices
 - Water temperature probes
- Periodic analysis of combustion, in accordance with regulations in force

7.4 MESSAGES ON THE DISPLAY

7.4.1 Display on GAHP/GA modules

The electronic boards on board the GAHP/GA/AY modules that make up the Link are equipped with a display, visible through the sight glass on the front panel of the relevant appliance.

7.4.2 Signals in the event of fault

If a fault occurs in one (or more) modules, the corresponding display flashes, indicating an operating code. Simultaneously, the display of the connected control panel (DDC or CCI) flashes. If it is a permanent error or warning the appliance stops. The warning is not an error, but rather a warning, and the appliance attempts to resolve the issue itself.



For diagnostics, please refer to the operating code tables in the individual module manuals or in the DDC/CCI control panel manuals.

7.5 RESTARTING A LOCKED-OUT APPLIANCE

7.5.1 Locked-out appliance

An external intervention (reset or repair) is required due to an appliance fault or problem with the system.

- A reset may be enough for a temporary and provisional fault.
- For a fault or breakdown, alert the maintenance technician or TAC.

7.5.2 Reset



Reset

- To restart the appliance you must know and perform the procedure concerning the issue signalled and identified by the code (Paragraph 7.4.2 p. 43).
- Only act if you are familiar with the issue and with the procedure (technical expertise and professional qualifications might be required).
- If you do not have sufficient expertise, and in any case of doubt, contact the TAC.

There are two options for resetting a fault:

1. If the appliance is connected to the DDC/CCI control panel, you may act through the control device, as described in the relevant manual.
2. You may act directly from the board of the individual module, as described in the module manual.

7.6 PERIODS OF INACTIVITY



Avoid emptying the installation

Emptying the system may cause damage due to corrosion of the water pipes.



Deactivate the system in winter

Should you intend to stop the appliance in the winter season, ensure at least one of the following conditions:

1. antifreeze function active (Paragraph 3.2.7 p. 28)
2. sufficient antifreeze glycol (Paragraph 3.2.8 p. 28)

7.6.1 Prolonged periods of inactivity

Should you foresee to leave the appliance inactive for a long period of time, disconnect it from the electrical and gas mains. These operations must be performed by qualified personnel.



How to deactivate the appliance for long periods of time

1. Switch the appliance off (Paragraph 6.2 p. 41).
2. Only when all the modules of the Link are completely powered off, disconnect the power supply as described in Paragraph 7.1.1.2 p. 42.

3. Close the gas valve.
4. If necessary, add water with glycol (if the appliance is disconnected from the power and gas mains, the active antifreeze protection is missing, Paragraph 3.2.7 p. 28).



How to reactivate the appliance after long periods of inactivity

Before reactivating the appliance, the operator/maintenance technician of the system must first of all:

- Check whether any maintenance operations are required (contact the TAC; see Paragraphs 7.2 p. 42 and 7.3 p. 43).
 - Check content and quality of the water in the system, and if necessary top it up (Paragraphs 3.2.10 p. 29, 3.2.9 p. 29 and 3.2.8 p. 28).
 - Ensure the flue gas exhaust duct is not obstructed, and that the condensate drain is clean.
- After completing the above checks:
1. Open the gas valve and ensure there are no leaks; should gas smell be noticed, close the gas valve again, do not switch any electrical devices on and request intervention by qualified personnel.
 2. Connect the electrical power supply as described in Paragraph 7.1.1.1 p. 42.
 3. Switch on the appliance by means of the provided control device (Paragraph 6.2 p. 41).

8 DIAGNOSTICS

8.1 APPLIANCES/CONTROL PANELS



For diagnostics refer to the operating code tables in the individual module manuals or DDC/CCI control manuals.

Robur mission

Robur is dedicated to dynamic progression
in research, development and promotion
of safe, environmentally-friendly, energy-efficiency products,
through the commitment and caring
of its employees and partners.



Robur S.p.A.
advanced technologies
for air conditioning
via Parigi 4/6
24040 Verdellino/Zingonia (BG) Italy
+39 035 888111 - F +39 035 884165
www.robur.com export@robur.it

